 


DONNEES TECHNIQUES

Courant de charge [A]	90
Type de réseau de bord	pour véhicules 12V
Type de poulie	V
Pince	M8 B+
Connectique	PLUG381

PHOTOS



Bornes	
B+	Positive
D+	Trio (Lamp)

DOCUMENTS

BT-130 Refus des carcasses alternateurs/démarrEURS

APPLICATIONS

IVECO		
DAILY (78-00) - 2.8 30-8	84 ch	09.1998 > 05.1999
	84 ch	09.1998 >
	84 ch	09.1998 > 05.1999
DAILY (78-00) - 2.8 30-8 V	84 ch	09.1998 >
DAILY (78-00) - 2.8 30-10	103 ch	01.1997 >
	103 ch	01.1998 > 05.1999
DAILY (78-00) - 2.8 30-10 C	103 ch	01.1997 >
	103 ch	01.1998 >
DAILY (78-00) - 2.8 35-8	84 ch	09.1998 >
	84 ch	09.1998 > 05.1999
DAILY (78-00) - 2.8 35-8 K	84 ch	09.1998 >
DAILY (78-00) - 2.8 35-10	103 ch	01.1996 > 05.1999
	103 ch	01.1996 >
DAILY (78-00) - 2.8 35-10 K	103 ch	01.1997 >
DAILY (78-00) - 2.8 35-12	122 ch	05.1996 > 05.1999
DAILY (78-00) - 2.8 35-12 K	122 ch	09.1996 > 08.1998
DAILY (78-00) - 2.8 49-10	103 ch	05.1996 > 05.1999
DAILY (78-00) - 2.8 49-10 K	103 ch	05.1996 >
DAILY (78-00) - 2.8 49-12	122 ch	05.1996 > 05.1999
DAILY (78-00) - 2.8 49-12 K	122 ch	05.1996 >
DAILY (78-00) - 2.8 49-12 V	122 ch	05.1996 >
DAILY (78-00) - 2.8 59-12	122 ch	05.1996 > 05.1999
DAILY (78-00) - 2.8 59-12 K	122 ch	05.1996 >
DAILY (78-00) - 2.8 59-12 V	122 ch	05.1996 >
DAILY (78-00) BUS - 2.8 A 40-10	103 ch	09.1996 >
DAILY (78-00) BUS - 2.8 A 40-12	122 ch	05.1996 >
DAILY (78-00) BUS - 2.8 A 45-10	103 ch	05.1996 >
DAILY (78-00) BUS - 2.8 A 45-12	122 ch	05.1996 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.