 


## DONNEES TECHNIQUES

Courant de charge [A]	<b>90</b>
Type de réseau de bord	<b>pour véhicules 12V</b>
Type de poulie	<b>PVR6</b>
Pince	<b>M8 B+</b>
Connectique	<b>PLUG650</b>

## PHOTOS




Bornes	
L	Lamp
DFM	

## DOCUMENTS

**BT-130 Refus des carcasses alternateurs/démarrateurs**

## APPLICATIONS

<b>IVECO</b>		
DAILY (00-06) - 2.8 29 L 9	84 ch	05.1999 >
DAILY (00-06) - 2.8 29 L 9 V	84 ch	05.1999 >
DAILY (00-06) - 2.8 29 L 11	105 ch	05.1999 >
DAILY (00-06) - 2.8 29 L 11 V	106 ch	05.1999 >
DAILY (00-06) - 2.8 29 L 13	125 ch	11.2001 >
DAILY (00-06) - 2.8 35 C/S 9	84 ch	05.1999 >
DAILY (00-06) - 2.8 35 C/S 9 V	84 ch	05.1999 >
DAILY (00-06) - 2.8 35 C/S 11	106 ch	05.1999 >
DAILY (00-06) - 2.8 35 C/S 11 V	106 ch	05.1999 >
DAILY (00-06) - 2.8 35 C/S 13	125 ch	05.1999 >
DAILY (00-06) - 2.8 35 C/S 13 V	125 ch	05.1999 >
DAILY (00-06) - 2.8 35 C 15	146 ch	11.2001 >
DAILY (00-06) - 2.8 35 C/S 15 V	146 ch	11.2002 >
DAILY (00-06) - 2.8 50 C 11	106 ch	05.1999 >
	106 ch	05.1999 >
DAILY (00-06) - 2.8 50 C 13	125 ch	05.1999 >
	125 ch	05.1999 >
DAILY (00-06) - 2.8 50 C 15	146 ch	01.2001 >
DAILY (00-06) - 2.8 65 C 15	146 ch	11.2001 > 04.2006

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.