
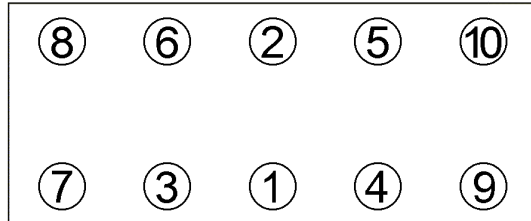


Anziehvorschrift für Zylinderkopf	049.418	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Fiat

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	128.AR.000 128.AS.000	128.A1.000 138.A1.000	138.A2.000/138.A4. 00 M 10	M 12
	* 95 Nm	* ➤ 90° ➤ 90° 1.000 km	* 35 Nm 70 Nm 93 Nm 1.000 km	

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

87 mm Ø, -/1,40 mm ÷

128 Rallye, Sport Coupé, Spezial

128 3p Mot.128.AR.000/ 128.A1.000

Ritmo 65 Mot.138.A1.000 bis >Mot.4292906

Ritmo 75 Mot.138.A2.000

Ritmo Sup. 85 Mot.138.A4.000 bis >Mot.4029618

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

049.418