



**NOTICE FOR
A-3327/8
A-3294/5**



THE VEHICLE MAY BE REMOVED FROM THE VEHICLE HOIST ONLY AFTER AIR SPRINGS HAVE BEEN RE-INFLATED. MAKE SURE THE POSITIONING PIN ON THE AIR SPRING IS INSTALLED CORRECTLY INSIDE THE BODY BEFORE FILLING THE AIR SPRINGS.

SYSTEM VENTING OR FILLING

THE BLEEDING/FILLING OF THE AIR SUSPENSION SYSTEM IS PERFORMED USING THE VEHICLE DIAGNOSTIC TESTER

VAS PC

1. CONNECT VEHICLE DIAGNOSTIC TESTER.
2. SELECT **GUIDED FUNCTIONS** MODE.
3. SELECT THE "34 - LEVEL CONTROL SYSTEM CONTROL MODULE" ADDRESS.
4. SELECT "J197 - VENTING OR FILLING THE SYSTEM" AND FOLLOW INSTRUCTIONS ON SCREEN.

ODIS - OFFBOARD DIAGNOSTIC INFORMATION SYSTEM

1. CONNECT VEHICLE DIAGNOSTIC TESTER.
2. SELECT **DIAGNOSTIC OPERATING MODE** AND START DIAGNOSTICS.
3. SELECT THE **CONTROL MODULE** TAB.
4. SELECT THE "34 - LEVEL CONTROL SYSTEM CONTROL MODULE" ADDRESS
5. SELECT "J-197 - VENTING OR FILLING THE SYSTEM" AND FOLLOW INSTRUCTIONS ON SCREEN

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)