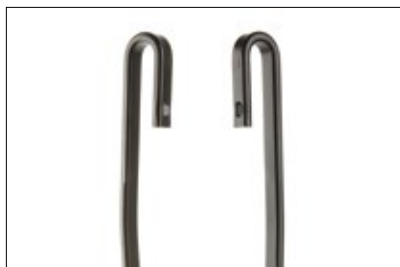
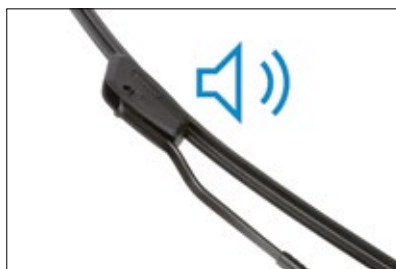



1 Interface (en*)

2 Adapter assembly (en*)

3 Assembly (en*)

4 Disassembly (en*)


**1 Interface (en*)****3 Assembly (en*)****4 Disassembly (en*)**

**1**

bg	Място за монтаж
cs	Rozhraní
da	Viskerarm type
de	Schnittstelle
el	Βραχίονας
en	Interface
es	Brazo
fi	Kiinnitys
fr	Interface
hr	Međusklop
hu	Csatlakozás
it	Braccio
ja	ワイパーアーム先端部
ko	인터페이스
nl	Arm
no	Grensesnitt
pl	Ramię
pt	Braço
ro	Interfață
ru	Интерфейс
sv	Gränssnitt
tr	Ara parça
cn	接口

2

bg	Монтаж адаптер
cs	Montáž adaptéru
da	Adapter montering
de	Montage Adapter
el	Συναρμολόγηση προσαρμογέα
en	Adapter assembly
es	Montaje del adaptador
fi	Adapterikiinnike
fr	Préparation de l'adaptateur
hr	Montaža adaptera
hu	Adapter felszerelés
it	Montaggio adattatore
ja	アダプターの取付け
ko	어댑터 조립
nl	Voorbereiden adapter
no	Montering adapter
pl	Montaż adaptera
pt	Montagem do adaptador
ro	Adaptor de montare
ru	Установить адаптер
sv	Montera adapter
tr	Adaptörün takılması
cn	接头安装

3

bg	Монтаж
cs	Montáž
da	Montering
de	Montage
el	Συναρμολόγηση
en	Assembly
es	Montaje
fi	Kiinnittäminen
fr	Montage
hr	Montaža
hu	Felszerelés
it	Montaggio
ja	取付け
ko	조립
nl	Montage
no	Montering
pl	Montaż
pt	Montagem
ro	Montare
ru	Установка
sv	Montering
tr	Takma
cn	安装

4

bg	Демонтаж
cs	Demontáž
da	Afmontering
de	Demontage
el	Αποσυναρμολόγηση
en	Disassembly
es	Desmontaje
fi	Irrottaminen
fr	Démontage
hr	Demontaža
hu	Leszerelés
it	Smontaggio
ja	取外し
ko	분리
nl	Demontage
no	Demontering
pl	Demontaż
pt	Desmontagem
ro	Demontare
ru	Демонтаж
sv	Demontering
tr	Sökme
cn	拆卸