
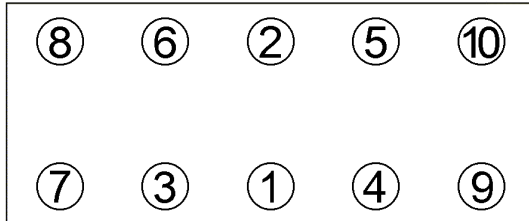


<b>Anziehvorschrift für Zylinderkopf</b>	<b>526.895</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Honda</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ \* 30 Nm  
Tightening/ 60 Nm  
Serrage/  
Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

75 mm Ø

Civic AL 1,2 Ltr. 40 kW (55 PS) 1984>1987

Mot.ZA2 ab Mot.1200 000>

Civic AG 1,3 Ltr. 52 kW (71 PS), 1984>1987

Mot.EV2 ab Mot.1200 001>

Civic AL, 1,5 Ltr. 63 kW (85 PS) 1984>1988

AG, AH, Mot.EW2 ab Mot.1200 001>

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*526.895\***