
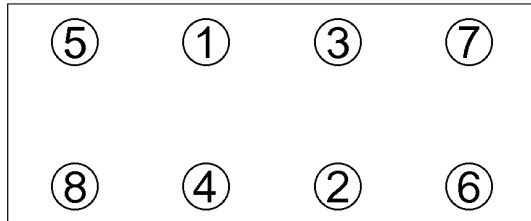


Anziehvorschrift für Zylinderkopf	529.710	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Subaru

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ * 39 Nm
Tightening/ 73 Nm
Serrage/ □ 90°
Apriete 75 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Justy I (KAD)1000 05.87-10.95 37 KW
 Justy I (KAD-A)1000 4WD 05.87-11.94 37 KW
 Justy I (KAD)1000 11.84-06.89 40 KW
 Justy I (KAD-A)1000 4WD 11.84-12.90 40 KW
 Libero Bus (E10, E12) 1,0 4WD 01.83-12.87 37 KW

MC EF10

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

529.710