
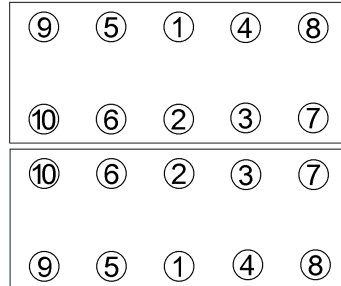


<b>Anziehvorschrift für Zylinderkopf</b>	<b>535.740</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



535.860  
M 11x1,5x170



Anziehen/ Tightening/ Serrage/ Apriete	M11 * 20 Nm 40 Nm ➤ 90° ➤ 90°	M8 15 Nm ➤ 90°
---	---	----------------------

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø 98,7 mm, 1,1 mm

Mot: M 273.961,963,965

S500 (W221), CL500 (C216)  
GL500 (X164), SL500 (R230)

links/left/gauche/izquierda/sinistra

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*535.740\***