
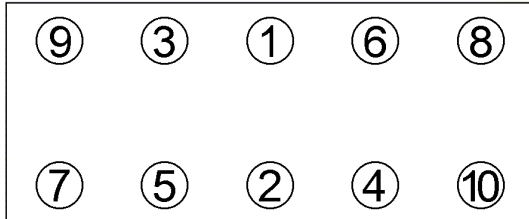


<b>Anziehvorschrift für Zylinderkopf</b>	<b>540.460</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Mitsubishi</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/  
Tightening/    \*    90 Nm  
Serrage/        □    40 Nm  
Apriete        ►    90°  
                     ►    90°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

LancerV 2,0D 06.92- 50 KW  
Space Wagon 2,0TD GLX 10.92 -10.98 60 KW  
Space Runner 2,0TD GLX 10.92 -08.99 60 KW  
GalantV 2,0 GLSTD 11.92 -08.96 66 KW  
LancerV 2,0 GLX D 12.92-10.03 50 KW  
GalantVI 2,0 TDI 09.96 -10.04 66 KW  
MC 4D68, 4D68T

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*540.460\***