
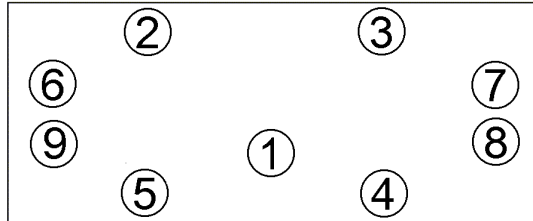


<b>Anziehvorschrift für Zylinderkopf</b>	<b>540.490</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Subaru</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ \* 29 Nm  
Tightening/ 59 Nm  
Serrage/ 64 Nm  
Apriete

**Zeichenerklärung / Explanations / Explication / Explicacion**

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Subaru MC: EA82  
1800 XT Coupe (XT) Turbo 4WD, 11.84-12.90, 88-100KW  
LeoneII 1800 4WD, 11.84-12.90, 66-88KW  
LeoneII 1800 Turbo 4WD, 11.84-12.90, 96-100KW  
LeoneII StationWagon 1800 4WD 11.84-07.91 66-88KW  
LeoneII Stat.Wag.1800Super4WD 03.89-12.90 96KW  
LeoII Stat.Wag.1800SuperTurbo4WD 11.84-12.90 100K

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*540.490\***