
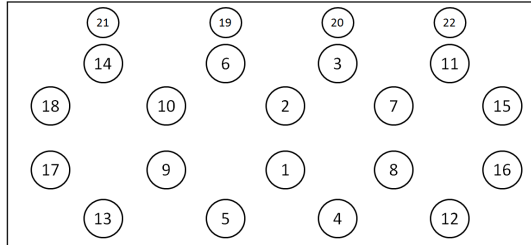


<b>Anziehvorschrift für Zylinderkopf</b>	<b>541.792</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>GM</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	M12	M8
*    ➤	Pos. 1-18: 50 Nm	Pos. 19-22: 25 Nm
	Pos. 1-18: 80 Nm	
	➤    Pos. 1-18: 60°	
	➤    Pos. 1-18: 60°	

Zeichenerklärung / Explanations / Explication / Explicacion

*    ➤	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*    ➤	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 105,36 mm; ⌀: 1,00 mm; LH

Mot: V8 Duramax  
6.6 ltr.

GMT 900, 610, 560

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*541.792\***