
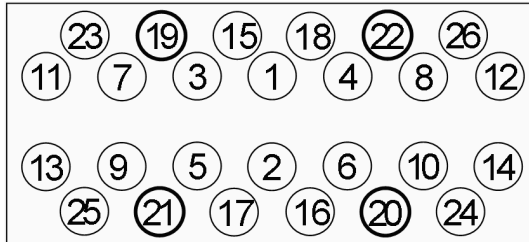


Anziehvorschrift für Zylinderkopf	704.240	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
passend für / suitable for adaptable à / adaptable a		Iveco

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	1-14: * 40 Nm 80 Nm 120 Nm <input type="checkbox"/> 120 Nm ➤ 90° ➤ 90° ➤ 45°	15-26: * 40 Nm 80 Nm 120 Nm <input type="checkbox"/> 120 Nm ➤ 90° ➤ 90°
---	---	---

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
<input type="checkbox"/>	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

112 mm Ø

180E24 EUROTECH, 180E27 EUROTECH ab 9/92<
190E24 EUROTECH, 190E27 EUROTECH ab 9/92<

Mot. 8360.46, 8360.46R

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

704.240