

- Ⓓ Wechselintervall alle ...
- ⒼⒷ Replacement interval ...
- Ⓘ Sostituzione dopo ...
- Ⓕ Intervalle de remplacement...
- Ⓔ Intervalo de cambio ...

15.000 km /

10.000 mi

- Ⓓ ... oder nach 1 Jahr
- ⒼⒷ ... or after 1 year
- Ⓘ ... or dopo 1 anno
- Ⓕ ... ou 1 fois par an
- Ⓔ ... o después de 1 año



Mazda 323 09/98 →

Mazda 626 05/97 →

Mazda Premacy 08/99 →

80000403 / CC1098 / MC 624-2

21652860 / CP1098 / MP 124-2

Einbauanleitung
Innenraumfilter

Fitting instructions
Cabin air filter

Istruzioni di montaggio
Filtro abitacolo

Notice de montage
Filtre d'habitacle

Instrucciones de montaje
Filtro de habitáculo

