


<b>Anziehvorschrift für Zylinderkopf</b>	<b>814.262</b>	
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>FORD</b>
		Das Original

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



820.490  
M 10x1,5x135

Anziehen/	*	20 - 40 Nm
Tightening/		40 - 60 Nm
Serrage/	➤	90°
Apriete	➤	90°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 83,0 mm,  $\frac{1}{2}$ : 1,70 mm

Mot: JGA, JPA, JPC, L4B, L6B, LJA, LJB, LJC, LJD  
LJE, LJF, LP1, LP2, LP3, LPA, LR1LR2, LRA  
LRB, LUA, LUB, LUC, LUD, LUG, LUH, LUJ, LUK  
1,3/1,6 ltr. HL/CFI/EFI/CVH

Fiesta, Escort, Orion

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*814.262\***