
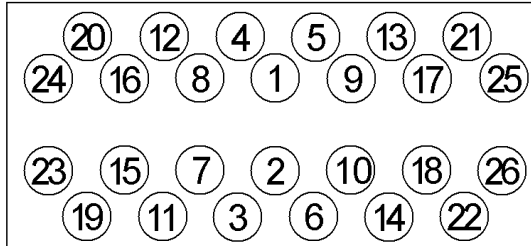


Anziehvorschrift für Zylinderkopf	916.110	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	
	Iveco	

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



Anziehen/	*	100 Nm
Tightening/		200 Nm
Serrage/		300 Nm
Apriete	<input type="checkbox"/>	300 Nm
	*	80° C
	<input type="checkbox"/>	300 Nm
		nach 1000 km:
	<input type="checkbox"/>	300 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
<input type="checkbox"/>	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

170.26 1978>10/1982
180.26, 190.26 1974>9/1987
240.26, 260.26, 330.26 ab 1974>
370.20 Bus, 370.25 Bus, 370.26 Bus ab 1976>

Mot. 8210.02
13798 ccm Ø 137

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

916.110