
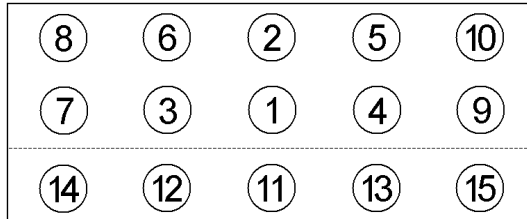


Anziehvorschrift für Zylinderkopf	986.373	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Fiat
		Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



760.510
M 12 x 134



Anziehen/ Tightening/ Serrage/ Apriete	M 12	M 8
* ➤	50 Nm	* 30 Nm
	100 Nm	
	90°	
	90°	

Zeichenerklärung / Explanations / Explication / Explicacion

* ➤	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 83 mm; $\frac{1}{2}$: 1,65 mm

Mot: AR 33601, AR 67501
146.B2.000, 146.D7.000, 149.A1.000,
149.B1.000, 149.B3.000, 149.B4.000,
149.B4.046, 160.A6.000, 160.A6.046,
160.A7.000, 160.B6.046, 160.D1.000,
176.A3.000, 176.A5.000, 176.B3.000,

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

986.373