



## Filter, Innenraumluft

### Hinweis:

Der Innenraumluftfilter befindet sich im Wagennieren, in Fahrtrichtung links hinter der Fußraumauskleidung.

### Ausbau:

Den Bodenteppich hinter den Pedalen umschlagen, die Filterabdeckung freilegen und die Abdeckung durch Lösen der Arretierung abnehmen.

(Abb. 1)

Den zweiteiligen Innenraumluftfilter wie dargestellt entnehmen.

(Abb. 2, 3)

### Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

**Auf richtigen Sitz des Filterelements achten!**

**Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!**

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!

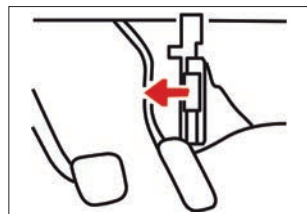


Abb.1

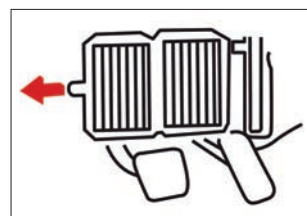


Abb. 2

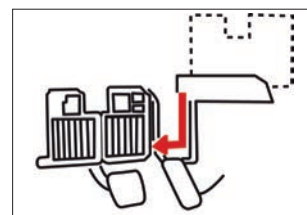


Abb.3





## Filter, Cabin Air

### Note:

The cabin air filter is installed inside the car at the left side behind the leg room floor covering.

### Filter Replacement:

Turn around the floor covering behind the pedals and remove the cover of the cabin air filter case by detaching the locking clips.

(pict. 1)

Take out the two cabin air filters like shown in the picture.

(pict. 2, 3)


The installation is done in reverse sequence of replacement.

### Take care about correct fitting of the filter!


### Please think about the environment when you throwing away the old filter!

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.


Similar to original!

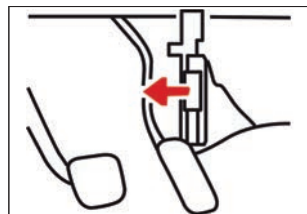

pict. 1

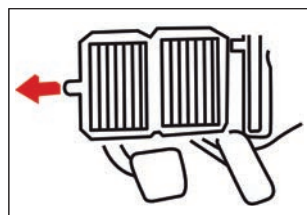

pict. 2

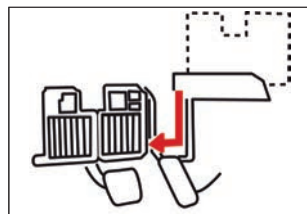

pict. 3

