

This product ships pressurized; prior to installation please ensure it is properly inflated by pressing on the exposed portion of the air spring. The air spring should be firm and resemble the image below. If the air spring is not inflated or does not resemble the image below, please contact your authorized retailer.



Adjustment to either right or left alignment should be made prior to installation by rotating the top silver portion of the mount in relation to the red covered air inlet.



Right Alignment



Left Alignment

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

Remove the shipping plug.



Install the air fitting, only until seated.
Do NOT overtighten.

