



ARTICLE NUMBER: _____

V40-63-0007

ATTENTION:

Please note the following instructions before replacing the EGR valve!

Before replacing the EGR valve, please make sure that the EGR valve and the other engine management components are checked according to the manufacturer's manual and inspection instructions.

Malfunction of the EGR valve are often caused by carbon particulate between piston rod and guide.

Prior to installation of a new EGR valve, the cause(s) of failure should be diagnosed and corrected.

The software of the engine management has to be updated, if necessary.

It is essential to replace also the gasket, which is supplied with the EGR valve!