





Hauptscheinwerfer

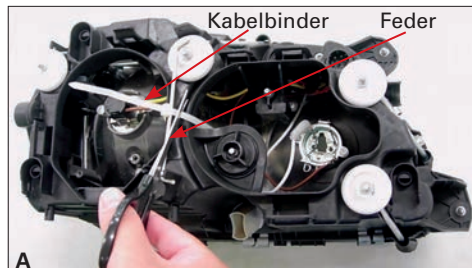


Kabelbinder abschneiden und herausnehmen.

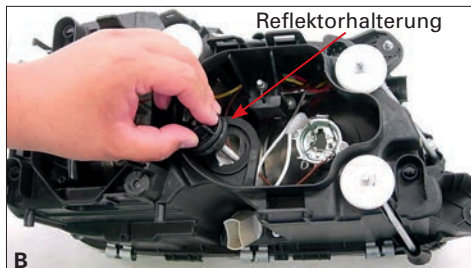


Die Reflektorhalterung herausnehmen. Hierzu die rechte Seite gegen den Uhrzeigersinn und die linke Seite in entgegengesetzter Richtung drehen.

* Muss bei Fahrzeugen mit manueller Leuchtweiteregulierung nicht ausgebaut werden. Kann sofort verwendet werden.

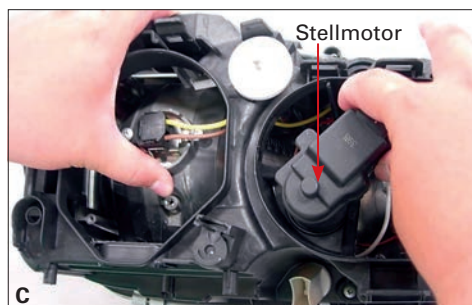

Den Reflektor mit der linken Hand leicht einhaken und den Stellmotor anstelle der Reflektorhalterung einsetzen. Dann die rechte Seite im Uhrzeigersinn drehen, bis sie fest sitzt, anschließend die linke Seite in entgegengesetzter Richtung drehen.

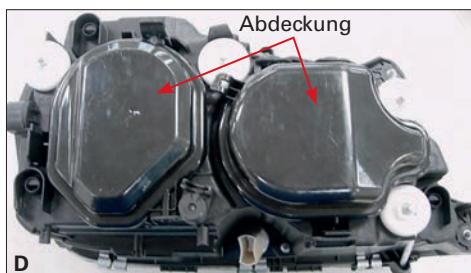


Abdeckung aufsetzen.






Headlight

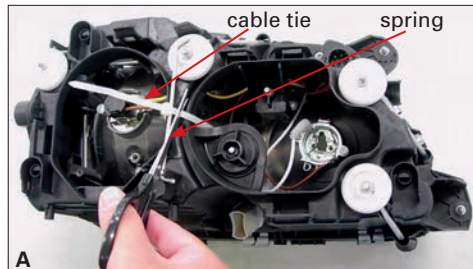


Please cut the cable tie and take it out.

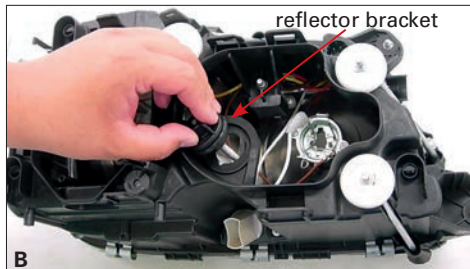


Take out the reflector bracket by rotating the right side in a counter-clockwise direction and the left side in the opposite direction.

* It does not need to be removed for manual type. It can be used directly.

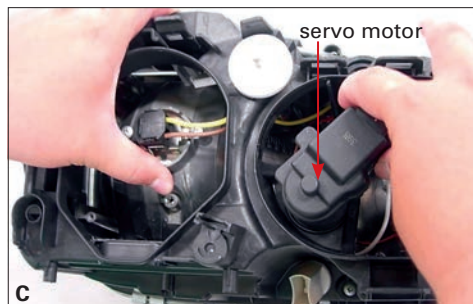

Hook the reflector lightly with your left hand and use the servo motor instead of the reflector bracket. Then rotate the right side in a clockwise direction until it's tight and turn the left side in the opposite direction.

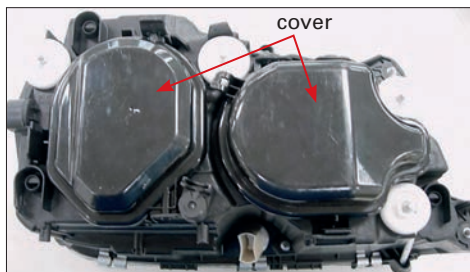

Put on the cover.

