



## Filter, Innenraumluft

### Hinweis:

Der Innenraumluftfilter befindet sich im Motorraum des Fahrzeuges auf der Beifahrerseite.

### Ausbau:

Die Motorhaube öffnen und die Abdeckung unterhalb der Windschutzscheibe durch Lösen der Schrauben entfernen.

(Abb. 1)

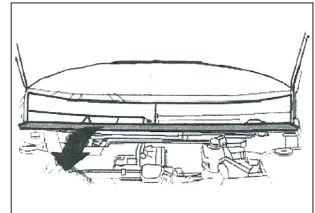


Abb. 1

Den Innenraumluftfilterkasten öffnen und den Filter entnehmen.

(Abb. 2)

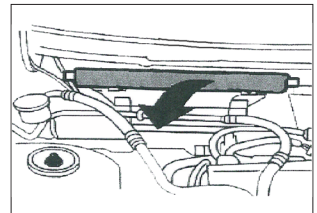


Abb. 2

### Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

**Auf richtigen Sitz des Filterelements achten!**

**Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!**

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!






## Filter, Cabin Air

### Note:

The cabin air filter is installed in the engine compartment at the co-driver's side.


### Filter Replacement:

Open the hood and detach the cover under the windshield by unscrewing the fitting bolts.  
(pict. 1)

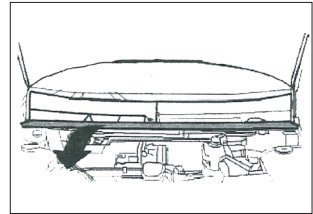

pict. 1

Open the cabin air filter case and take out the filter.  
(pict. 2)

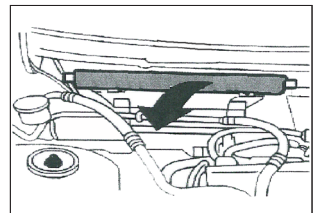

pict. 2

The installation is done in reverse sequence of replacement.

**Take care about correct fitting of the filter!**

**Please think about the environment when you throwing away the old filter!**

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

