

Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724

HY-017-BB

171103N

Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 1724 prise 12-N


Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724

Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlg. DIN/ISO norm 1724


Instrucciones de montaje de kit eléctrico para  
enganche de remolque con caja de conexiones  
12-N según norma DIN/ISO 1724

Istruzioni di montaggio di set di cavi elettrici per  
gancio da traino con zoccolo a 12-N conforme alla  
norma DIN/ISO 1724

Monteringsanvisningar elkabelsats för dragkrok  
med 12-N kontaktdosa enligt DIN/ISO norm 1724





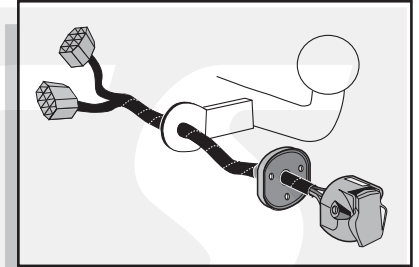





## HYUNDAI SANTA FE 2001-




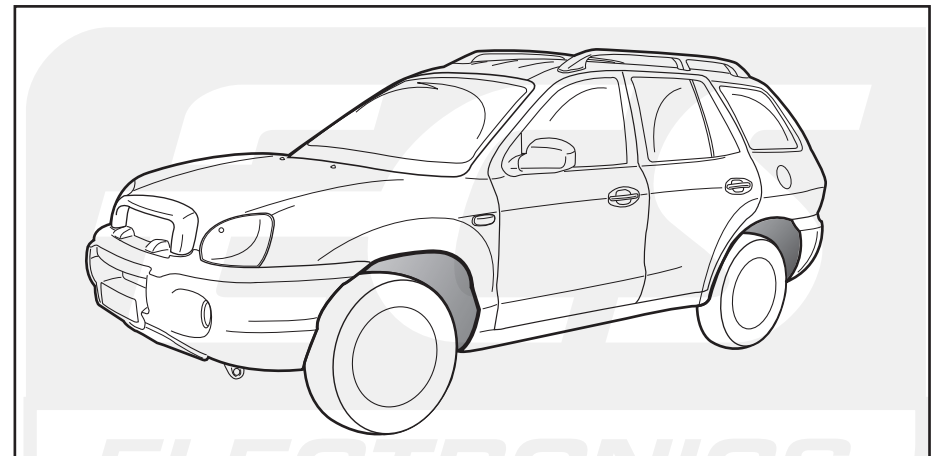


Bestel Nr.: HY-017-BB


\*Einzelteilliste \*Liste de pieces \*Part list \*Onderdelenlijst  
\*Lista de componentes \*Elenco componenti \*Dellista

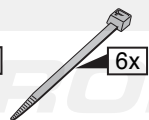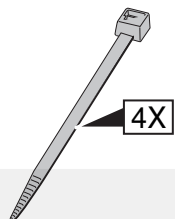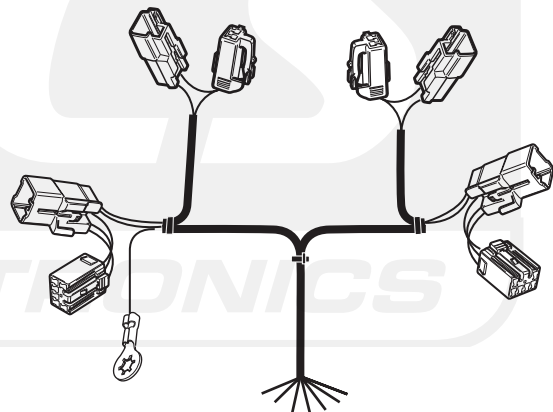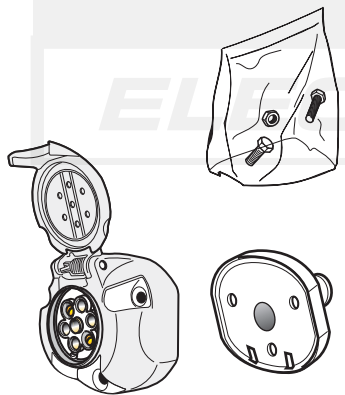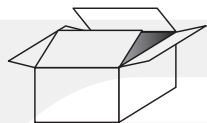

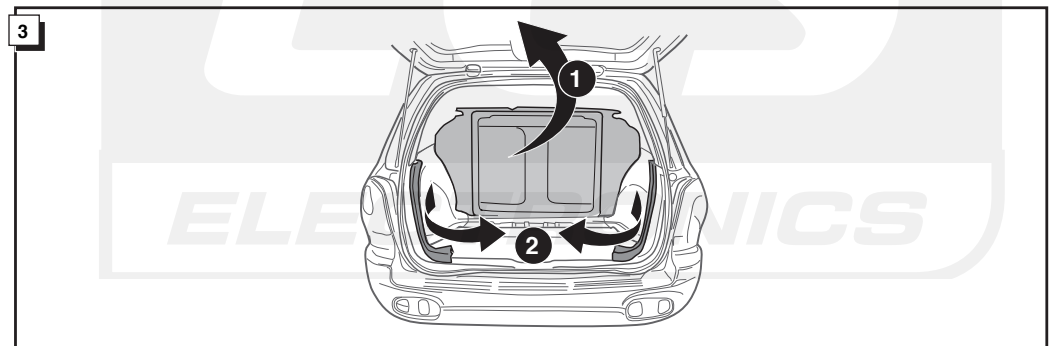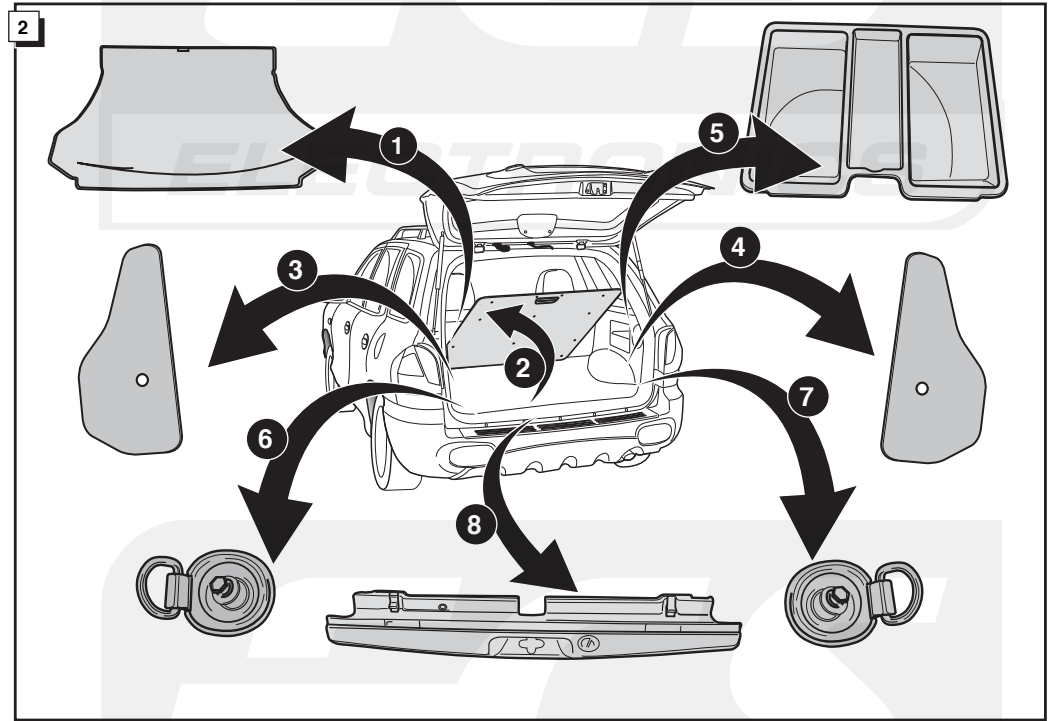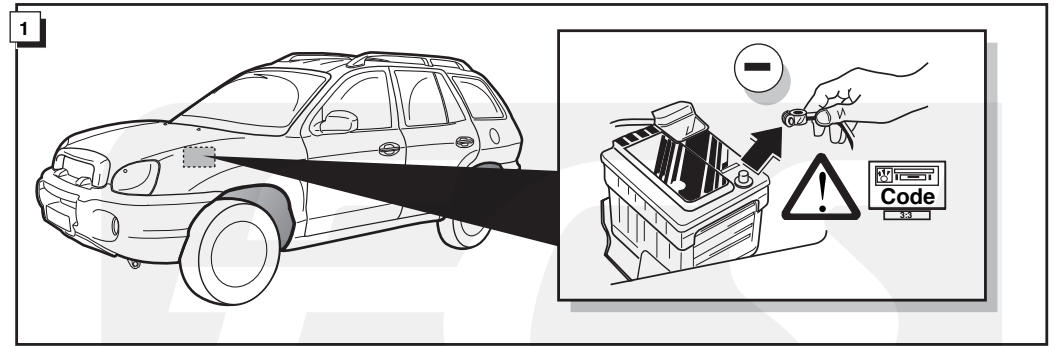


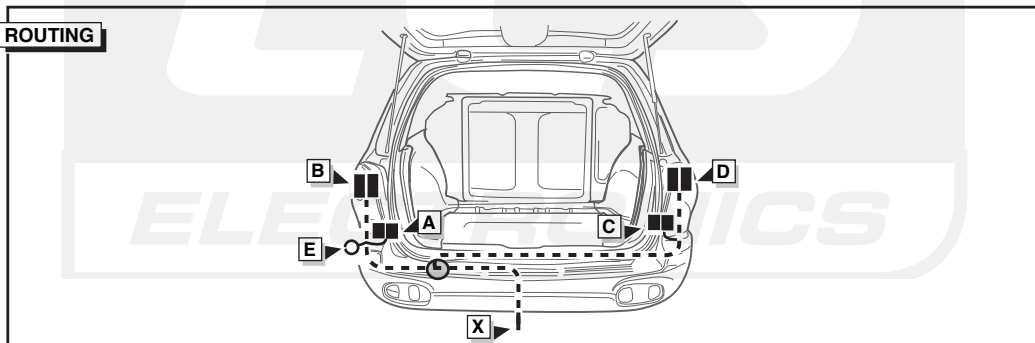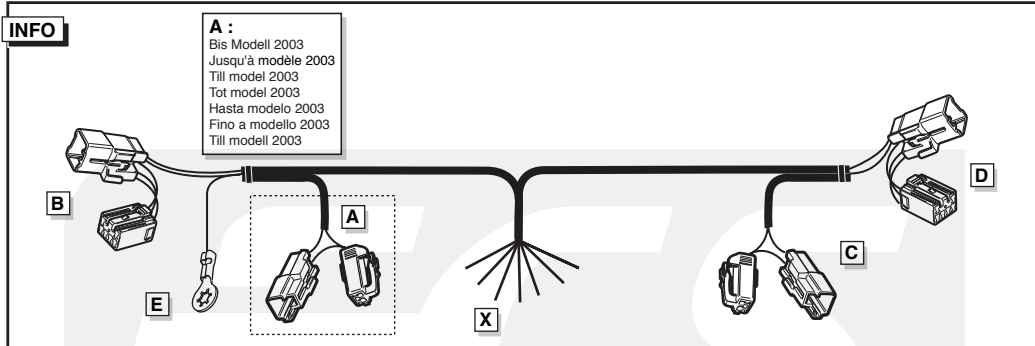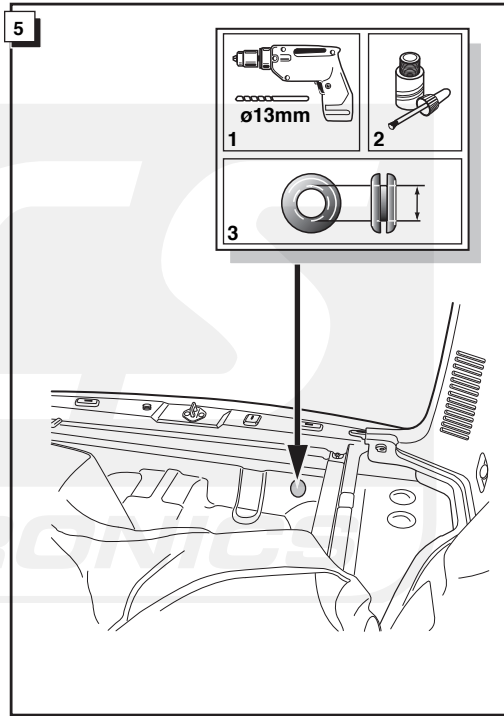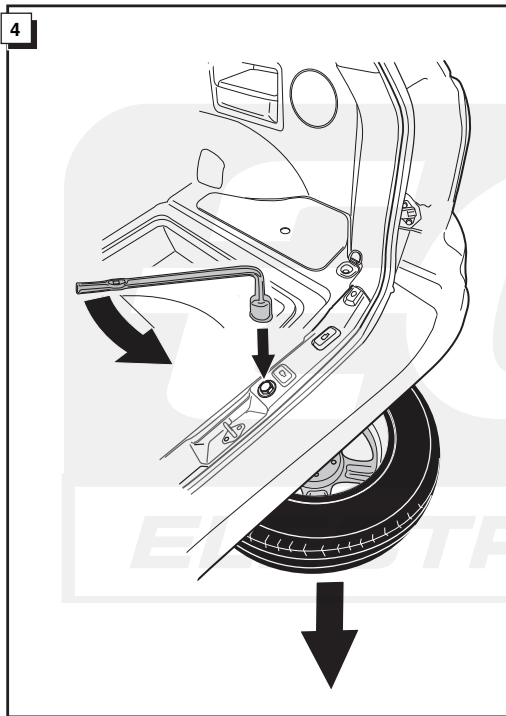

14

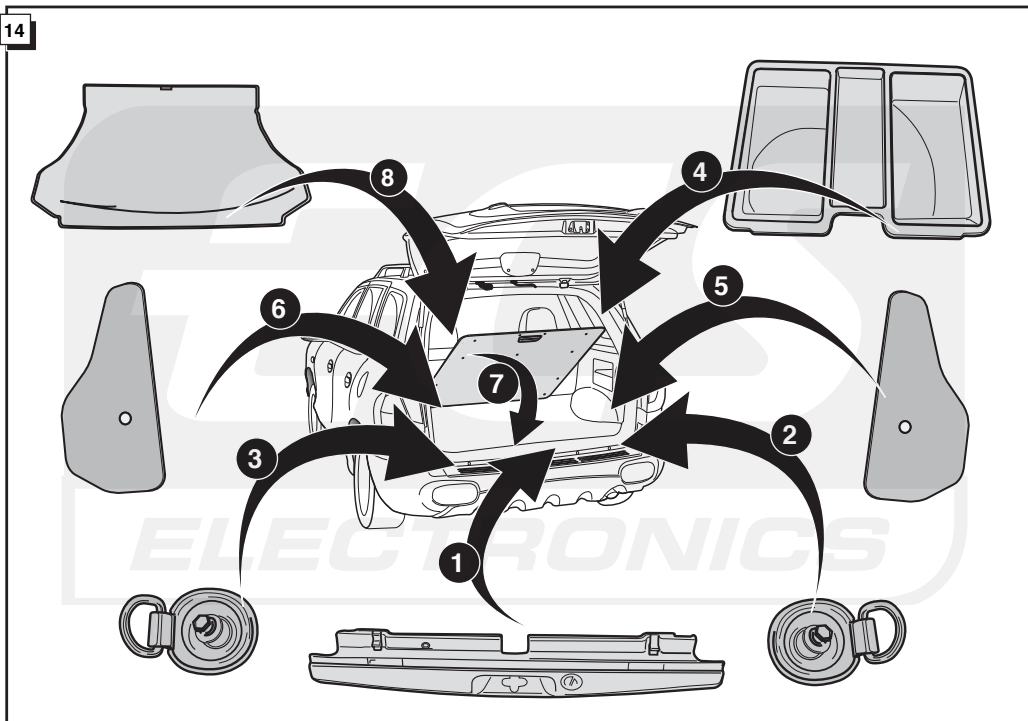

6

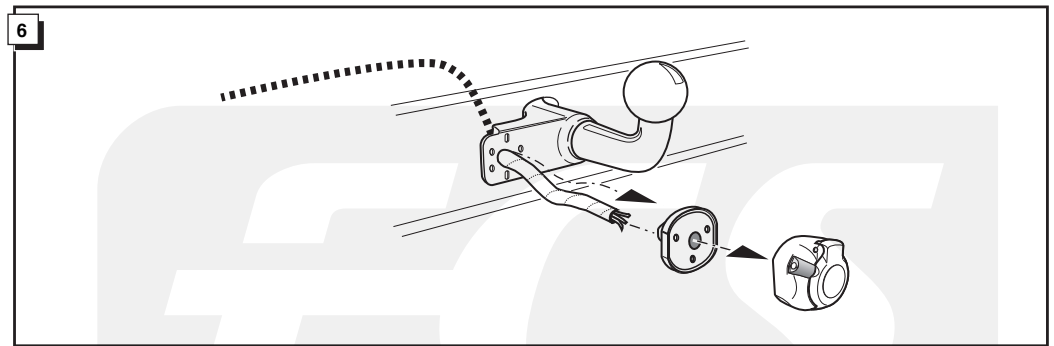


## INFO




Anschluss Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting  
 Conexión de la caja de enchufe / Allaccio zoccolo / Anslutning kontaktdosa

		INFO						
DIN/ISO 1724		DE	FR	GB	NL	ES	IT	SE
↶	1/L	gelb	jaune	yellow	geel	amarillo	giallo	gul
🚗🔌	2	blau	bleu	blue	blauw	azul	blu	blå
⏏ 1-8	3/31	weiß	blanc	white	wit	blanco	bianco	vit
↷	4/R	grün	vert	green	groen	verde	verde	grön
☀	5/58-R	braun	marron	brown	bruin	marrón	marrone	brun
STOP	6/54	rot	rouge	red	rood	rojo	rosso	röd
☀	7/58-L	schwarz	noir	black	zwart	negro	nero	svart
🚗🔌 → 🚗🔌	8/58-b	grau	gris	grey	grijs	gris	grigio	grå

7

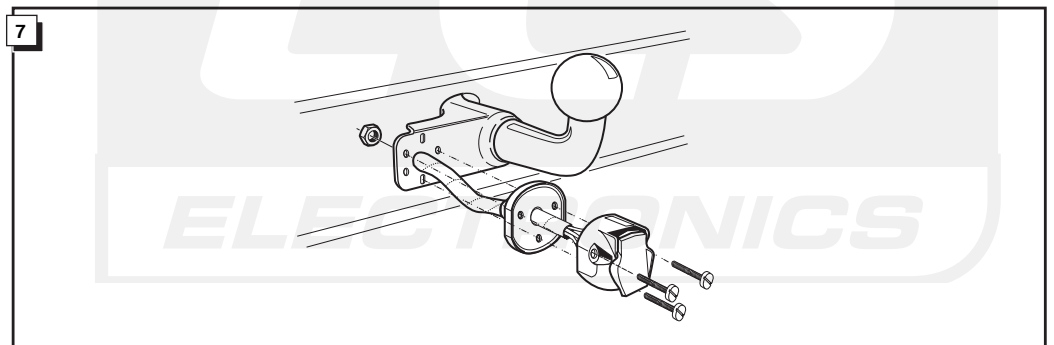


8

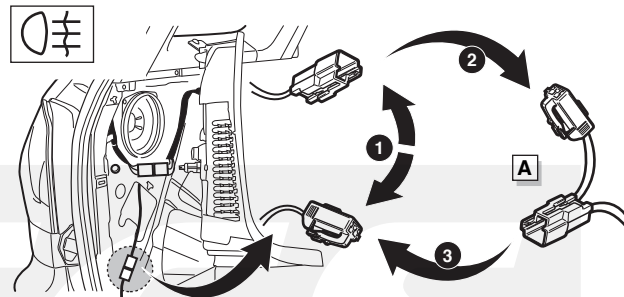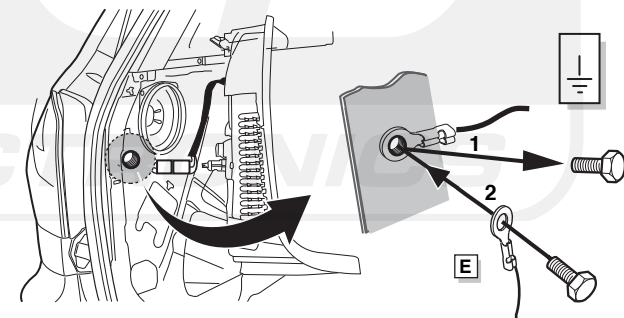
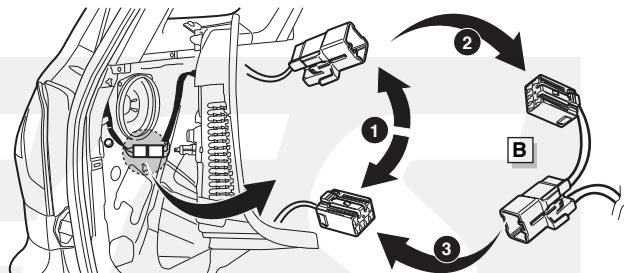


**A :**  
 Bis Modell 2003  
 Jusqu'à modèle 2003  
 Till model 2003  
 Tot model 2003  
 Hasta modelo 2003  
 Fino a modello 2003  
 Till modell 2003


9

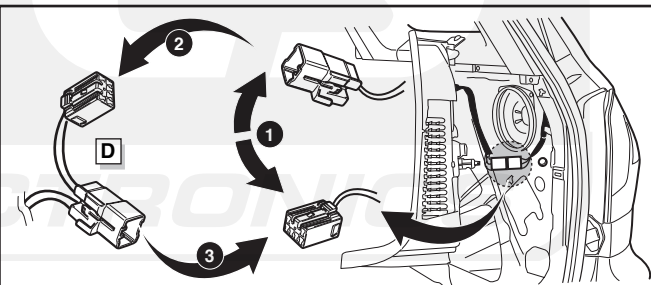

10

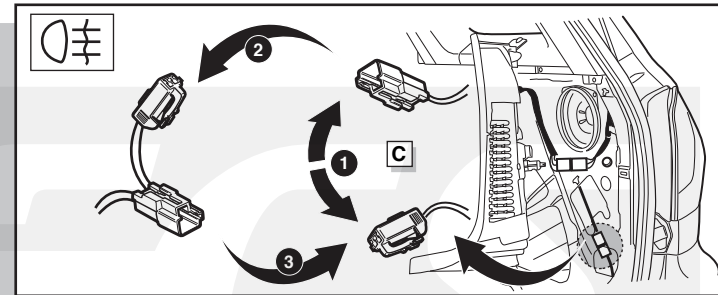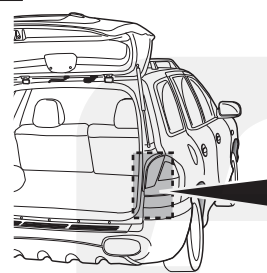

11

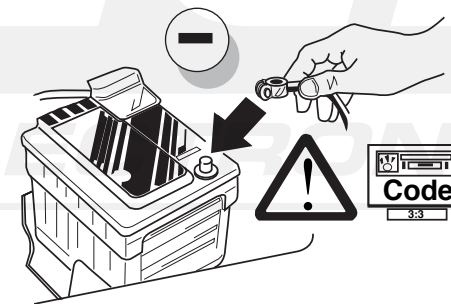

12



**FUNKTIONEN KONTROLLIEREN !**  
**CONTRÔLER LES FONCTIONS !**  
**CHECK FUNCTIONS !**  
**CONTROLEER FUNCTIES !**  
**¡ CONTROLAR FUNCIONES !**  
**CONTROLLA FUNZIONI !**  
**KONTROLLERA FUNKTIONERNA !**

13

