




**Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724**

**Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 1724 prise 12-N**


**Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlg. DIN/ISO norm 1724**



**Instrucciones de montaje para juego  
eléctrico para gancho de tiro Según  
caja de enchufe 7 contactos 12N.  
Según la norma(Din ISO 1724)**



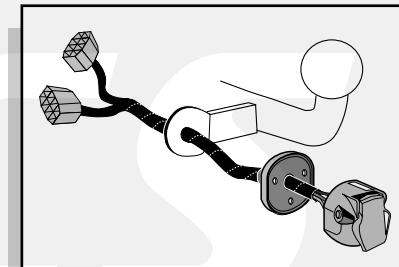


NISSAN PRIMERA SEDAN 2001-

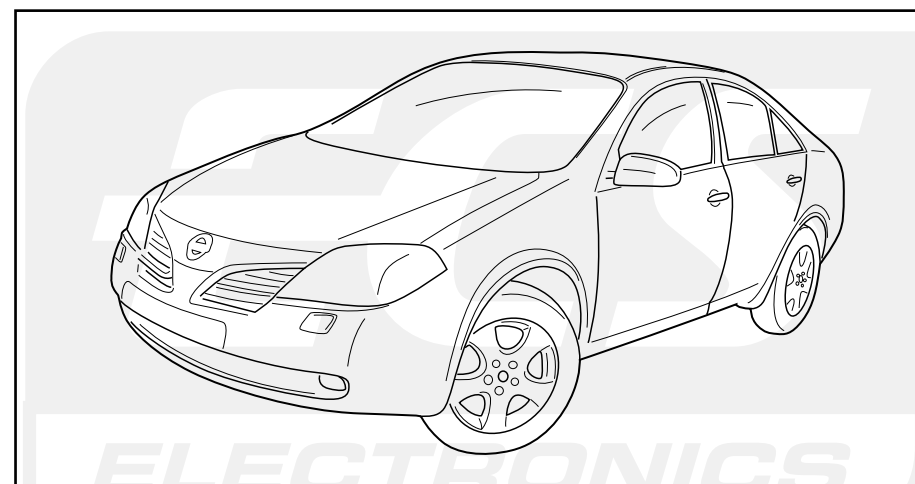


Bestel Nr.: NI-020-BL

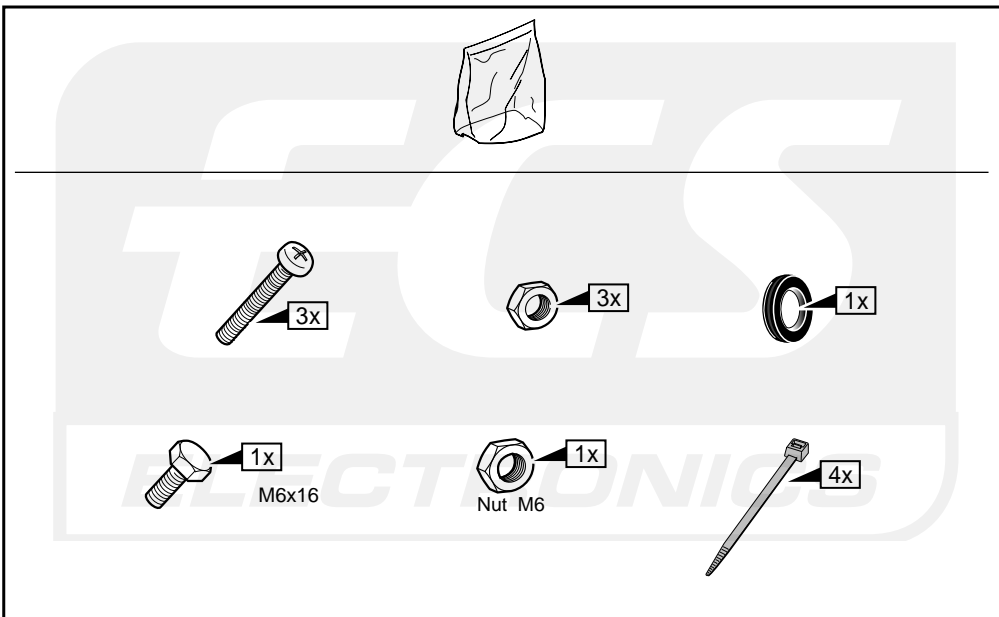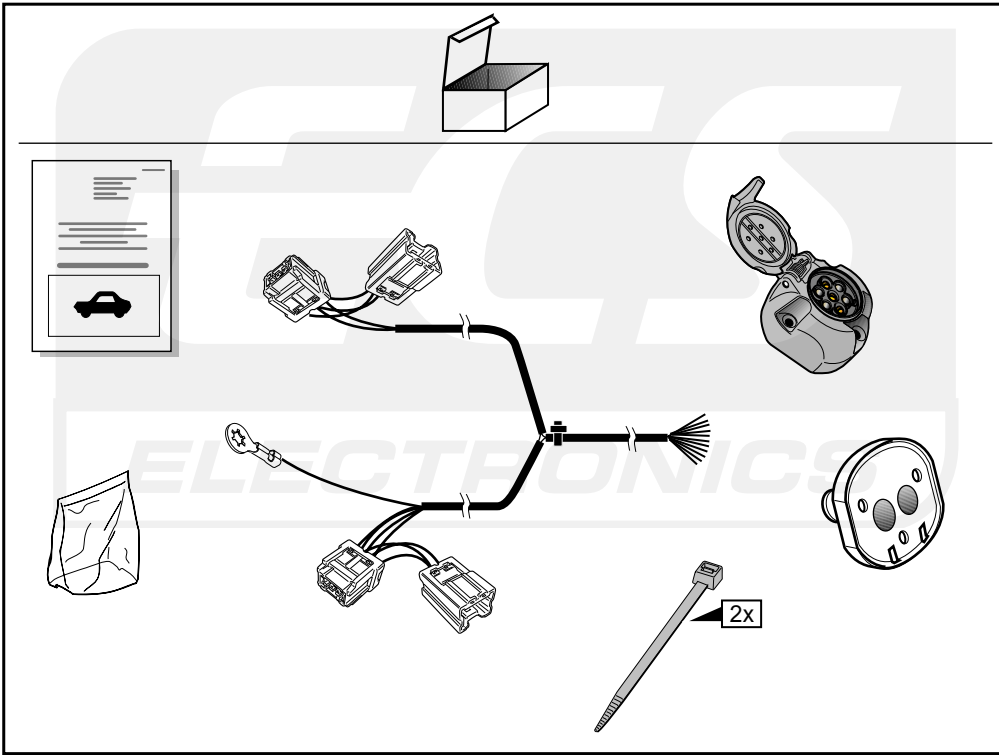


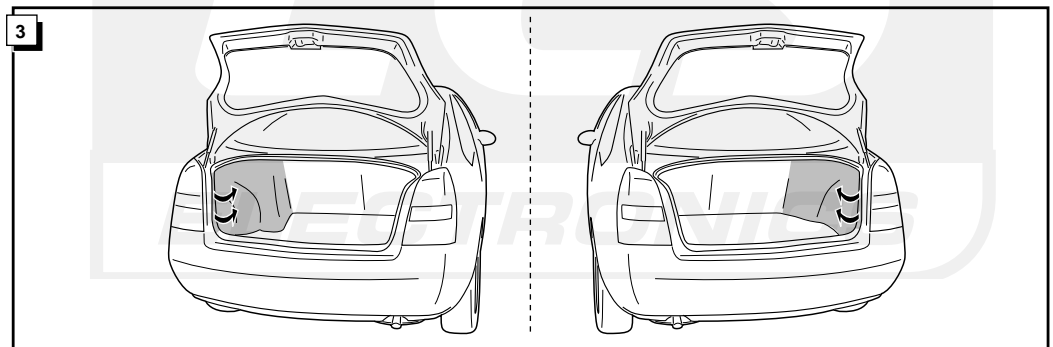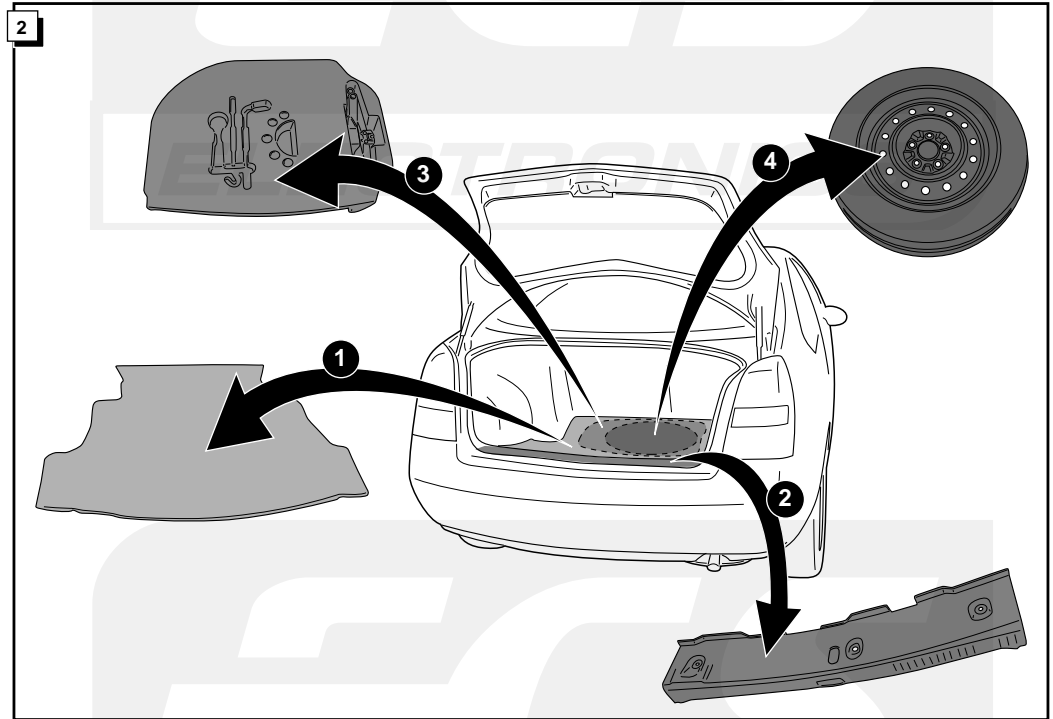
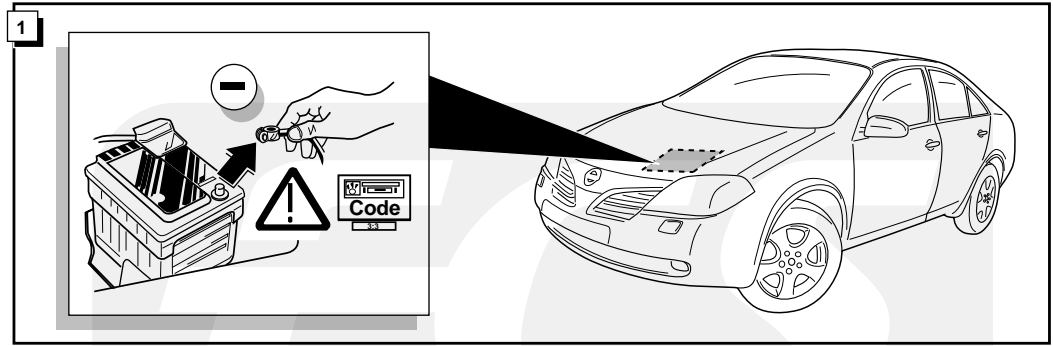


INFO

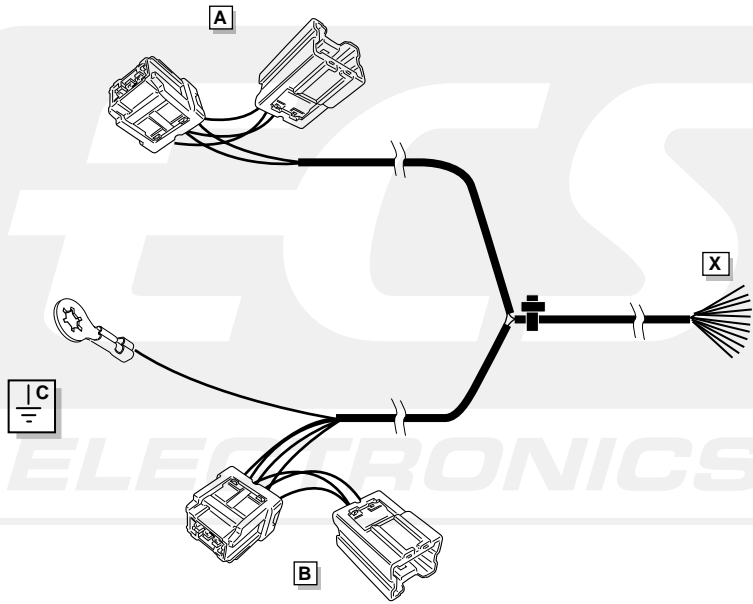

ROUTING

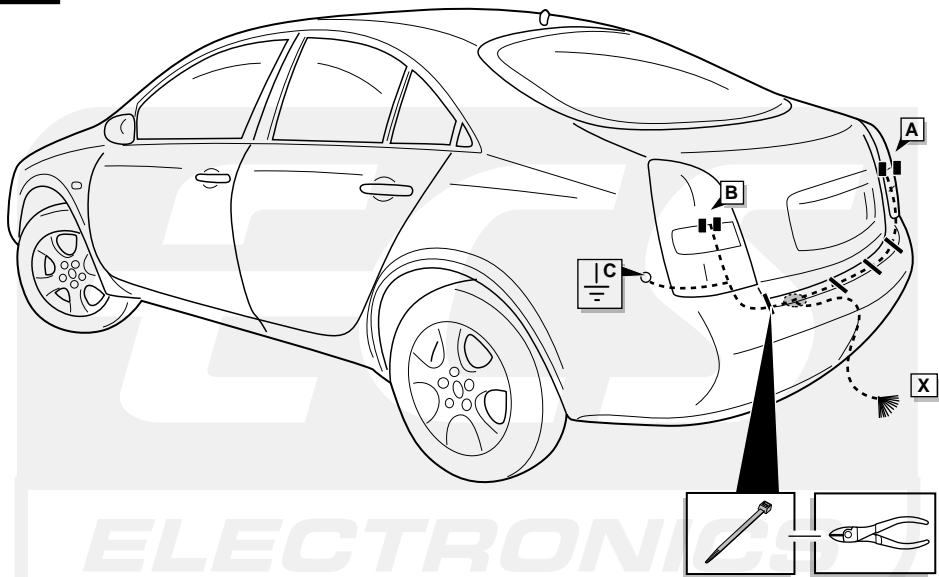




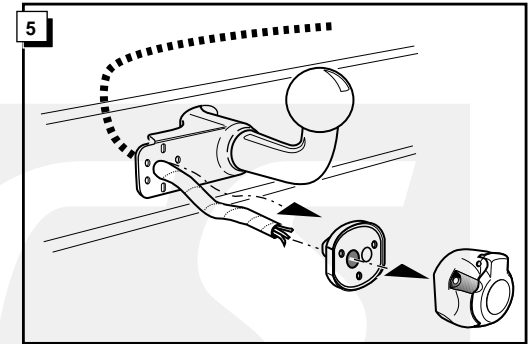
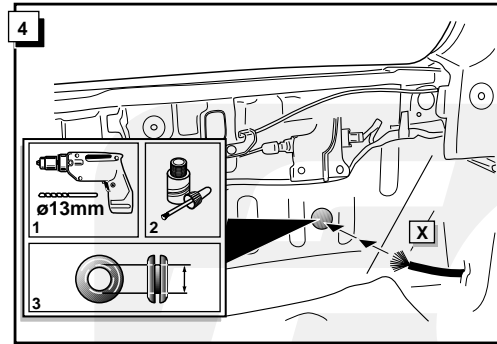


**INFO**

Anschluß Steckdose / Connection de la prise / Socket connection /  
Contactdoos aansluiting / Conexión del caja de enchufe

DIN/ISO 1724		D	F	GB	NL	ES
←	1/L	gelb	jaune	yellow	geel	amarillo
↔	2	blau	bleu	blue	blauw	azul
⏏	1-8	weiß	blanc	white	wit	blanco
→	4/R	grün	vert	green	groen	verde
☀	5/58-R	braun	marron	brown	bruin	marrón
STOP	6/54	rot	rouge	red	rood	rojo
☀	7/58-L	schwarz	noir	black	zwart	negro
↔	8/58-b	grau	gris	grey	grijs	gris

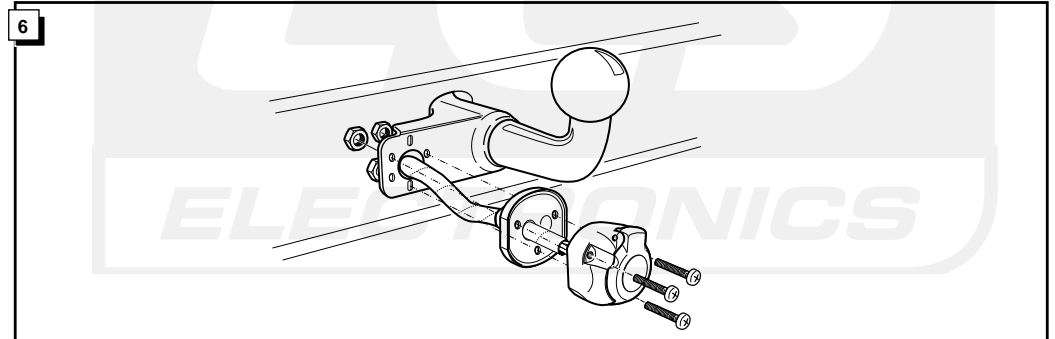

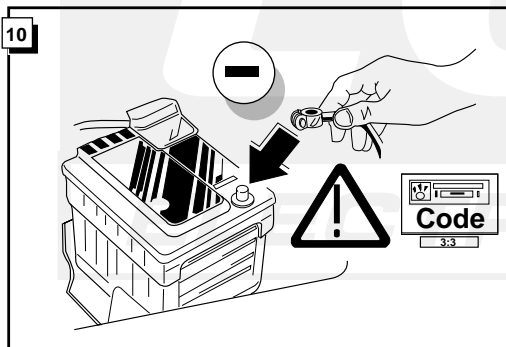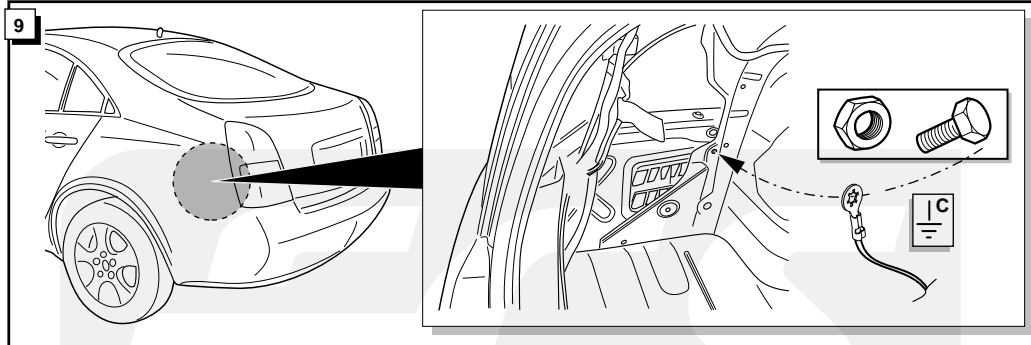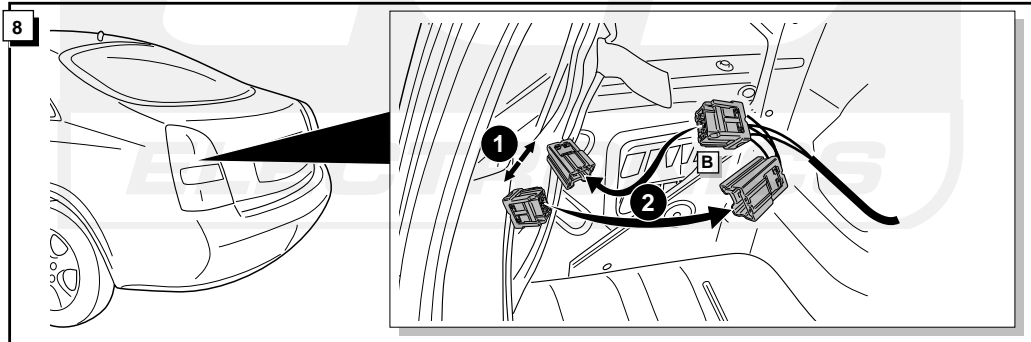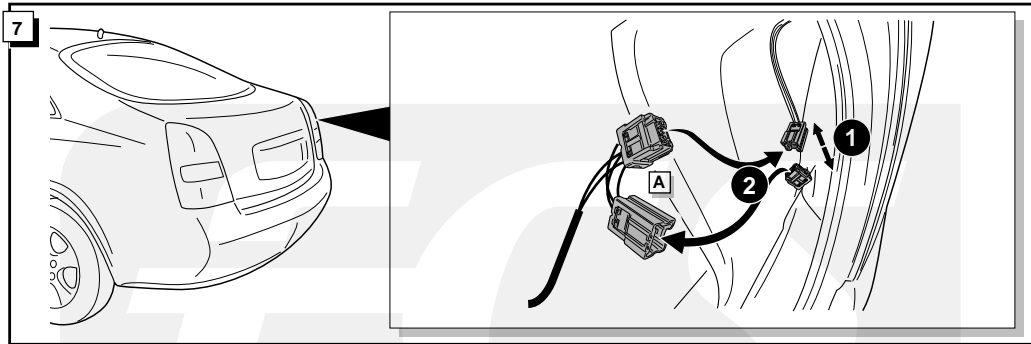

11

**! FUNKTIONEN KONTROLLIEREN !**  
**! CONTRÔLER LES FONCTIONS !**  
**! CHECK FUNCTIONS !**  
**! CONTROLER FUNCTIES !**  
**! CONTROLA LOS FUNCIONES !**

