
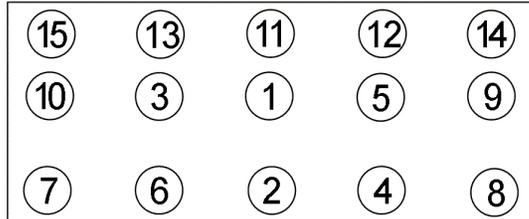


<b>Anziehvorschrift für Zylinderkopf</b>	<b>157.744</b>	
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>GM</b> Das Original

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

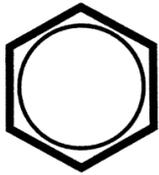

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	M11 Pos. 1-10: 30 Nm Pos. 1-10: 90° Pos. 1-10: 70°	* ➤	M8 Pos. 11-15: 30 Nm
---	-------------	---	--------	-------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ □ ● ➤	neue Zylinderkopfschrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
-----------------------	--	---	---	--

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 104 mm;  $\frac{1}{8}$ : 1,33 mm

Mot: LS3, L99, L92, LY6, L76

LC8, L96, L94, L9H

6,0 - 6,2 ltr. V8

Escalade, Camaro, Caprice,  
Silverado, Tahoe, Sierra

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*157.744\***