
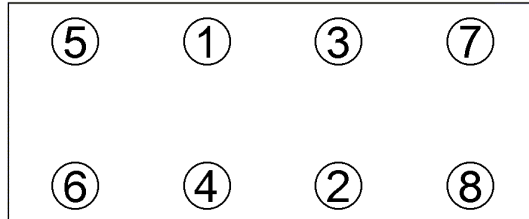


Anziehvorschrift für Zylinderkopf	314.626	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Ford

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/	*	40 - 55 Nm
Tightening/		50 - 70 Nm
Serrage/	●	15 min
Apriete		85 - 95 Nm
	*	15 min
		90 - 110 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

91,8 mm Ø, rechts/right

2,3 Ltr. V6, 79/80/84 kW (107/108/114 PS)
20M XL/RS/P7A 10/1969>12/1971, Capri 10/1969>
Taunus 10/1971>08/1982, Sierra 10/1982>
Consul, Granada 1972>
2,6 Ltr. V6, 92 kW (125 PS)
26M P7A 10/1969>12/1971, Capri 09/1970

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

314.626