
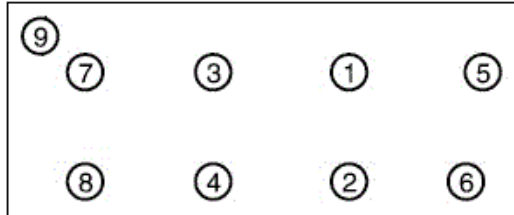


Anziehvorschrift für Zylinderkopf	448.110	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
passend für / suitable for adaptable à / adaptable a		Chrysler/Dodge

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	*	M11 1-8 / 45 lb-ft M11 1-8 / 65 lb-ft M11 1-8 / 65 lb-ft	*	M11 1-8 / 60 Nm M11 1-8 / 90 Nm M11 1-8 / 90 Nm
	➤	M11 1-8 / 90° M8 9 / 10 lb-ft M8 9 / 15 lb-ft M8 9 / 25 lb-ft	➤	M11 1-8 / 90° M8 9 / 12 Nm M8 9 / 20 Nm M8 9 / 35 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Chrysler Town & Country 2010-2004 3.3L V6 201cid
Dodge Caravan 2007-2004 3.3L V6 201cid
Dodge Grand Caravan 2010-2004 3.3L V6 201cid

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

448.110