
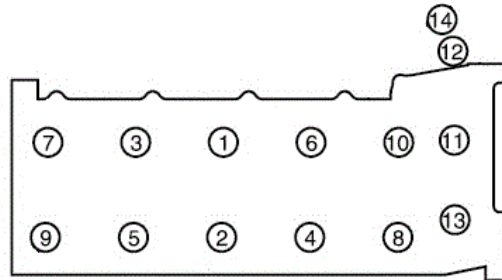


Anziehvorschrift für Zylinderkopf	454.860	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Dodge/Jeep
		Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	*	M11 1-10 / 15 ft-lb	M11 1-10 / 20 Nm
		M11 1-10 / 35 ft-lb	M11 1-10 / 48 Nm
		M8 11-14 / 18 ft-lb	M8 11-14 / 25 Nm
	➤	M11 1-10 / 90°	M11 1-10 / 90°
		M8 11-14 / 22 ft-lb	M8 11-14 / 30 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Dodge Dakota 2003-2000 4.7L V8 287cid
Dodge Durango 2003-2000 4.7L V8 287cid
Dodge Ram 1500 2003-2002 4.7L V8 287cid
Jeep Grand Cherokee 2003-1999 4.7L V8 287cid

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

454.860