
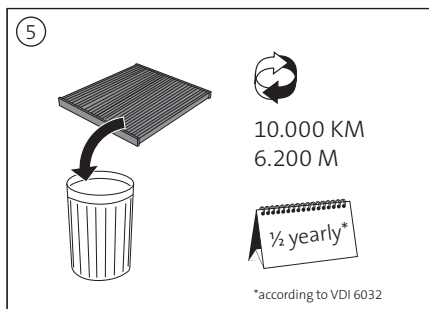
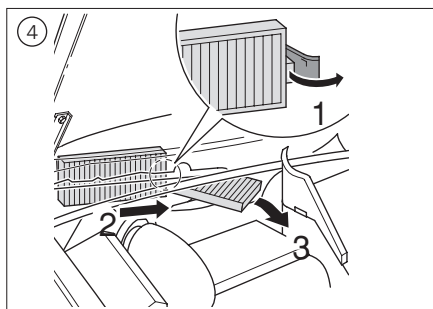
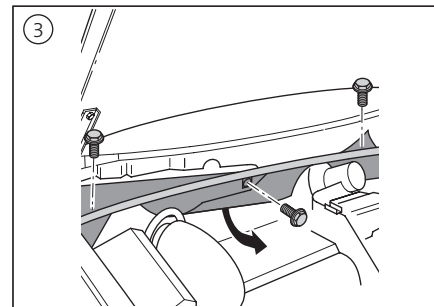
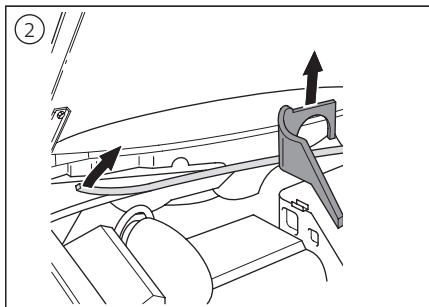


FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 ISTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

Ford Galaxy 01.96 →
 Seat Alhambra 01.96 →
 VW Sharan 06.95 →

micronAir® blue

BL525
 CB1020

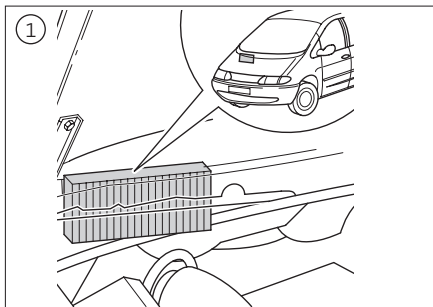

03-CA-532-December-2017-ML