



Einbauhinweis/installation instruction Renault Scenic I 1996 - 2003

Vorne links/Front left (OE Ref. No. 7700 838 592)

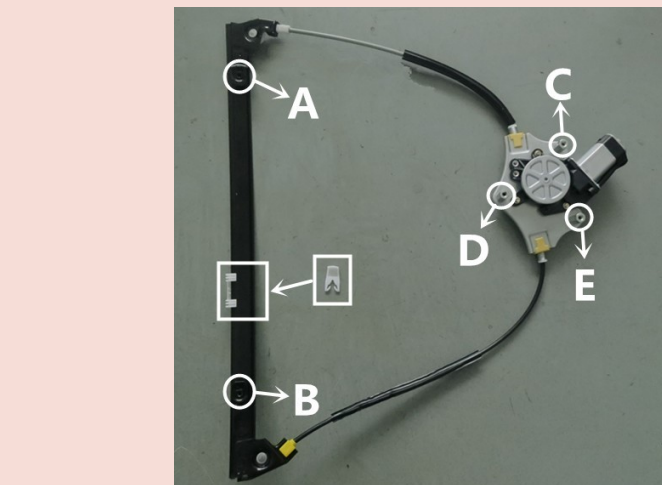

Vorne rechts/Front right (OE Ref. No. 7700 838 591)

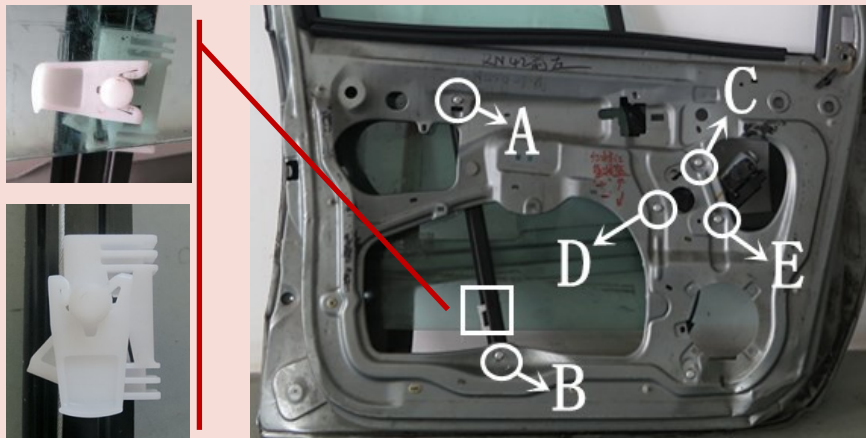