

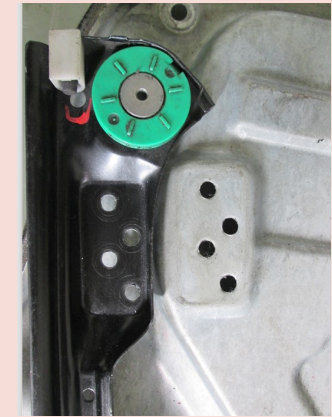


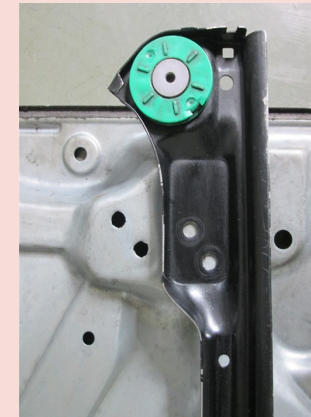



Einbauhinweis/installation instruction VW Transporter T5 2003 – 2015

Vorne links/ Front left (OE Ref. No. 7H0 837 753)

Schritt 1/Step 1

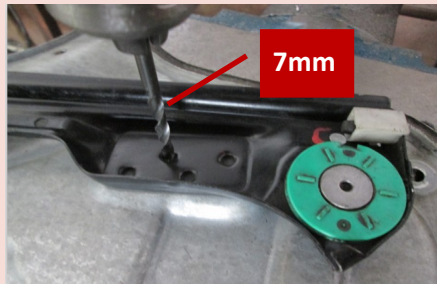

Schritt 2/Step 2

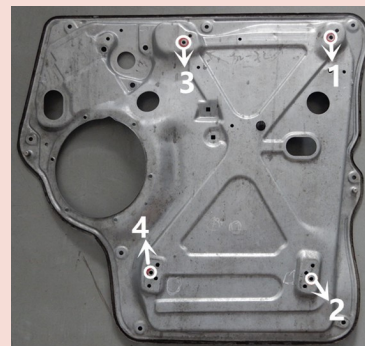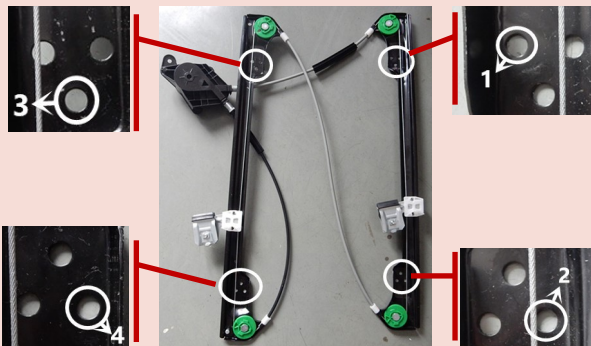

Schritt 3/Step 3

