
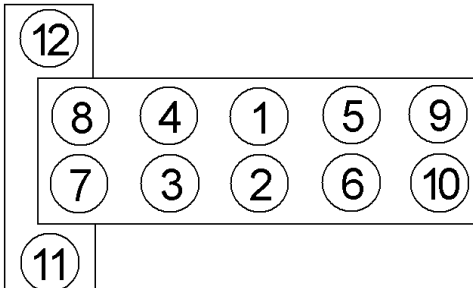


Anziehvorschrift für Zylinderkopf	572.500	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Opel

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



125.930
M 8x1,25x119



Anziehen/	►	Pos. 1-12: 25 Nm
Tightening/	*	Pos. 1-12: 60°
Serrage/	*	Pos. 1-12: 60°
Apriete	*	Pos. 1-12: 60°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 73,9 mm; $\frac{1}{2}$: 0,57 mm

Mot: Z12XEP; Z14XEP
1.2-1.4 ltr. (55-66 kW 75-90 PS)

Opel Agila A, Astra G, Astra H, Combo
Cors C, Corsa D, Meriva A
Suzuki Wagon R

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

572.500