
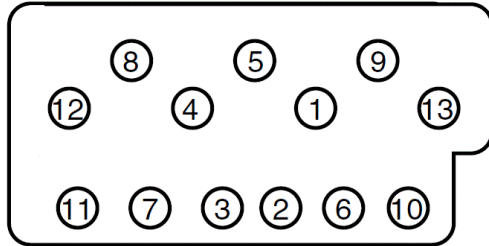


Anziehvorschrift für Zylinderkopf	696.480	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	GM Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	1985-1993&1992- 1995VIN W	1994-2014
*	65 ft-lb in three steps	* 22 ft-lb ➤ Long bolts 75° ➤ Medium bolts 65° ➤ Short bolts 55°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

1985-2014 4.3L V6 262cid
Chevrolet Blazer, Astro, C10, C20, K10, K20, R10
GMC Silverado 1500, Jimmy, K1500, K2500,
GMC Savana, Sierra, Sonoma
ISUZU Hombre
Oldsmobile Bravada
Pontiac Bonneville, Grand Prix, Parisienne

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

696.480