
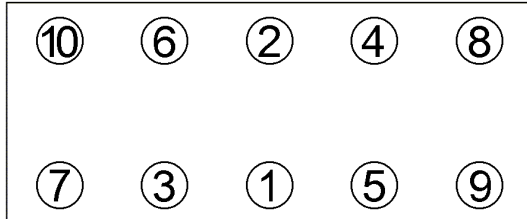


<b>Anziehvorschrift für Zylinderkopf</b>	<b>863.980</b> passend für / suitable for adaptable à / adaptable a	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	<b>Fiat/Iveco</b>	

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



760.300  
M 12 x 120/160



Anziehen/	*	20 Nm
Tightening/		40 Nm
Serrage/	➤	90°
Apriete	➤	90°

**Zeichenerklärung / Explanations / Explication / Explicacion**

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ducato    ab 1994>

Mot. 8140.47                                  2499 ccm