

## Assembly instructions for driveshaft support

Einbauhinweis für Lagerung, Gelenkwelle  
 Instructions de montage pour suspension, arbre de cardan  
 Instrucciones de montaje para soporte de transmisión  
 Инструкция по установке подвесной опоры карданного вала  
 Istruzioni di montaggio del supporto albero motore

**MEYLE no. 414 151 0100/S**  
**Short no. MDM0114**

To fit/Passend für/Aptos para/Convient pour/для/Adatti per  
**PORSCHE Cayenne II | VW Touareg**



**Installation by qualified personnel only.  
 Car manufacturer's instructions to be  
 observed closely.**

Einbau nur durch geschulte Fachkräfte. Hinweise der Fahrzeughersteller genau befolgen.

El montaje sólo debe realizarse por un técnico instruido. Siga exactamente las indicaciones del fabricante del vehículo.









Installation uniquement par main-d'oeuvre spécialisée. Suivre les indications du fabricant d'automobile pour l'installation.

Монтаж должны производить только обученные специалисты. Следует точно соблюдать инструкции завода-изготовителя автомобиля.


Montaggio solo da parte di meccanici specializzati. Sono da seguire esattamente le istruzioni fornite dal costruttore del veicolo.

Montáž pouze vyškoleným personálem.


Vždy dodržovat montážní návody a pokyny výrobce vozu.

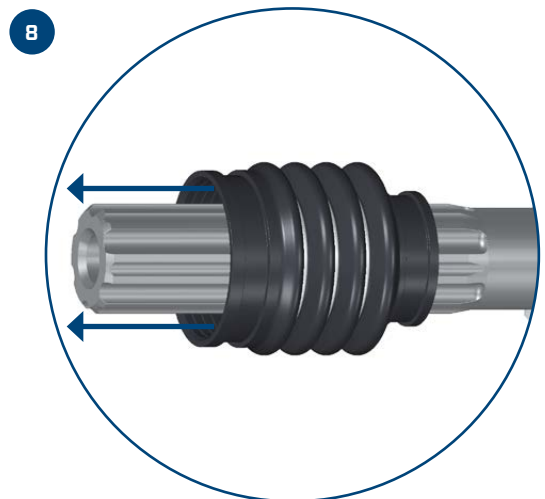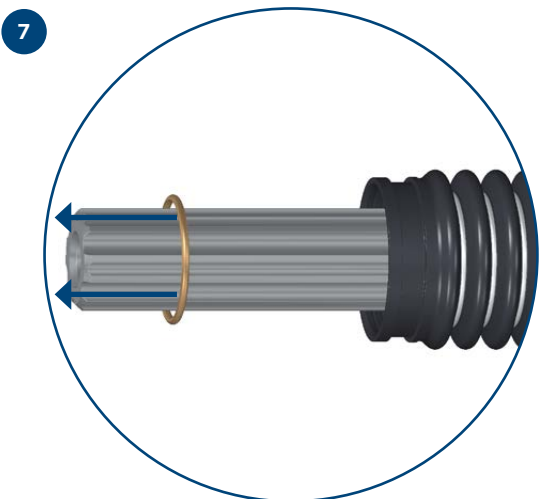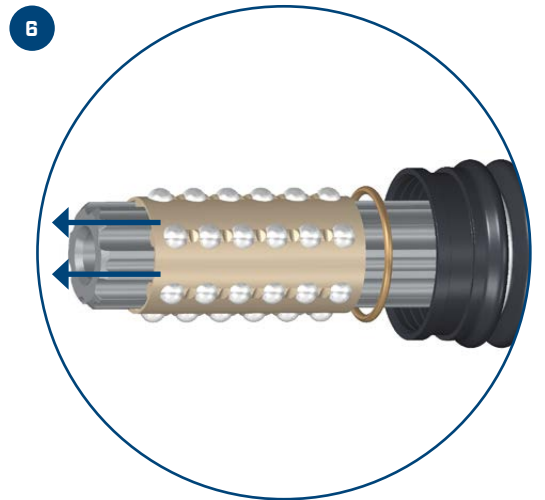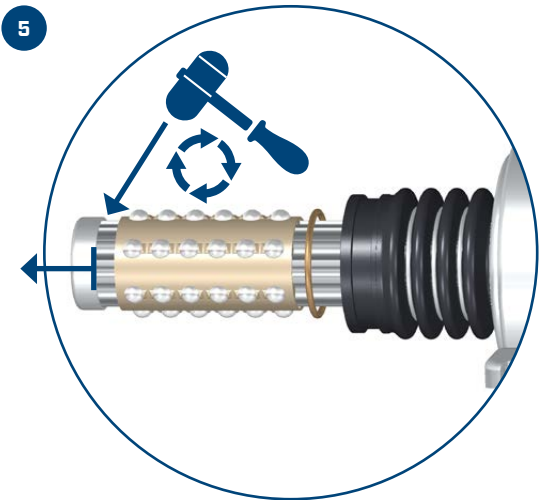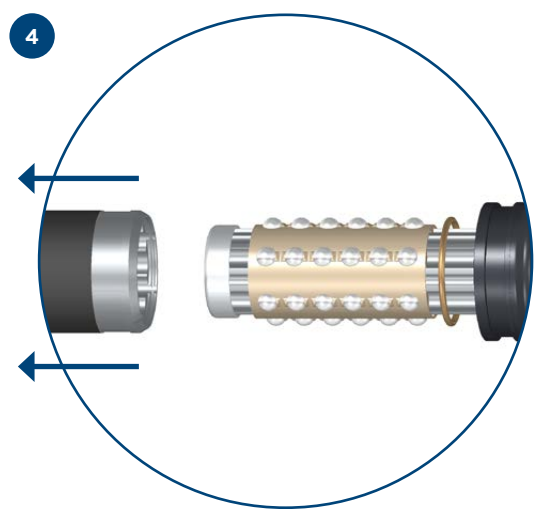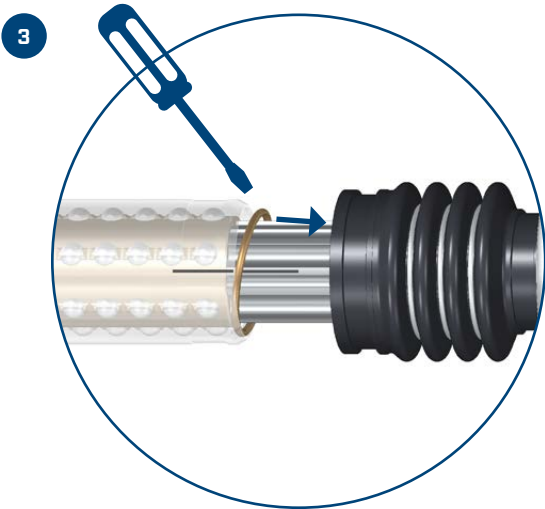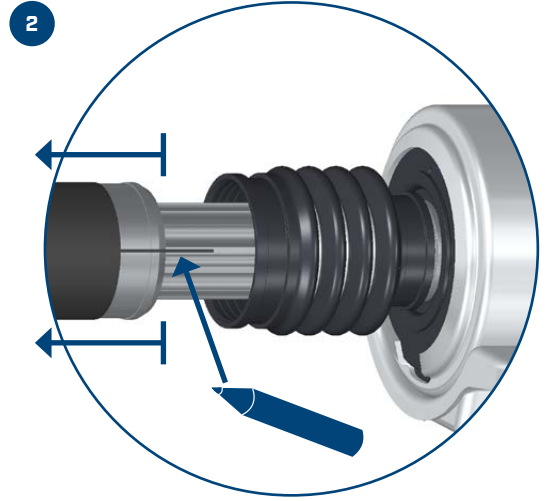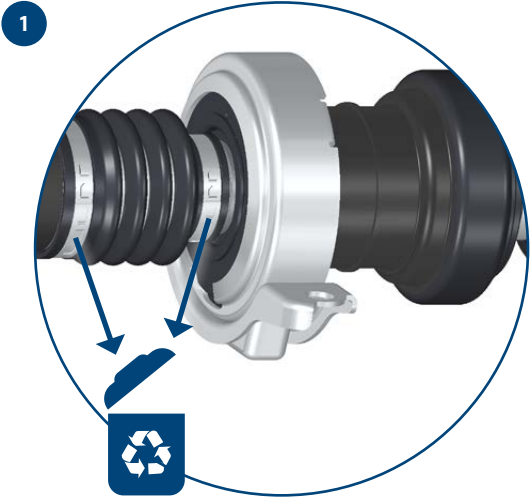


9

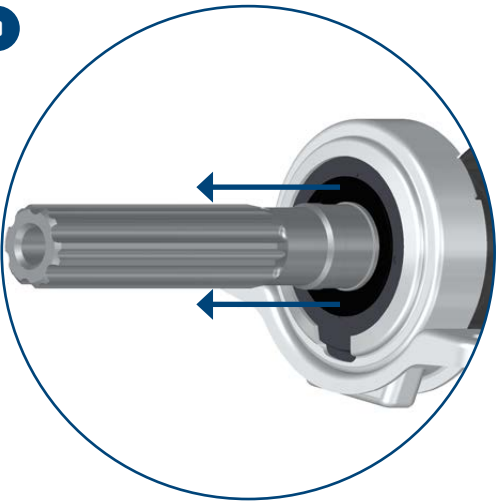


10

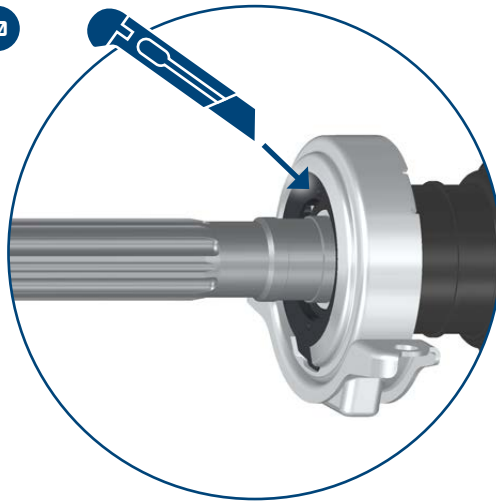


11

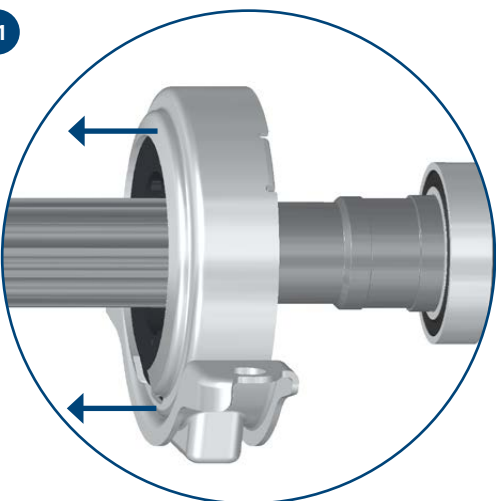


12

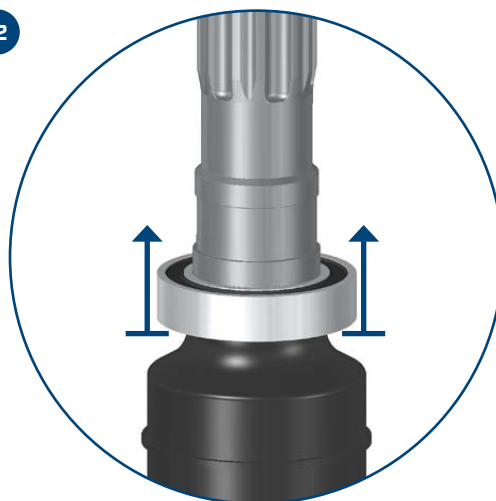


13

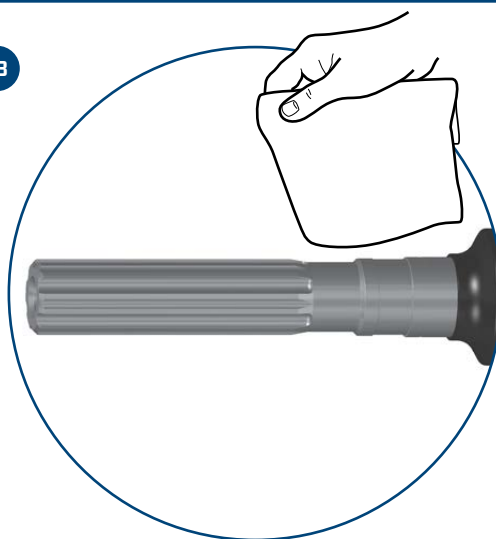

14

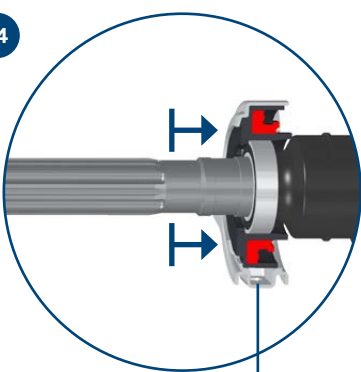


MEYLE

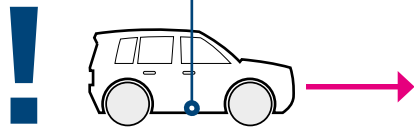


15

MEYLE

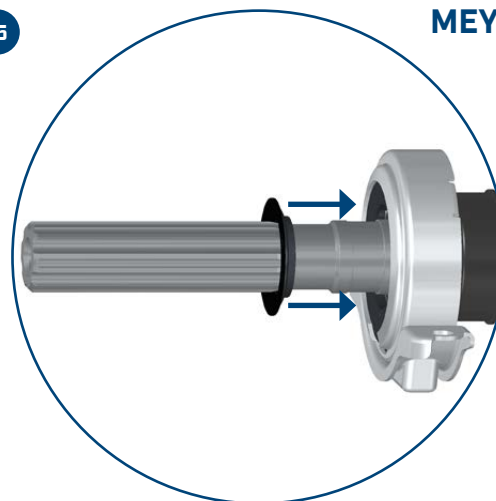


16

MEYLE

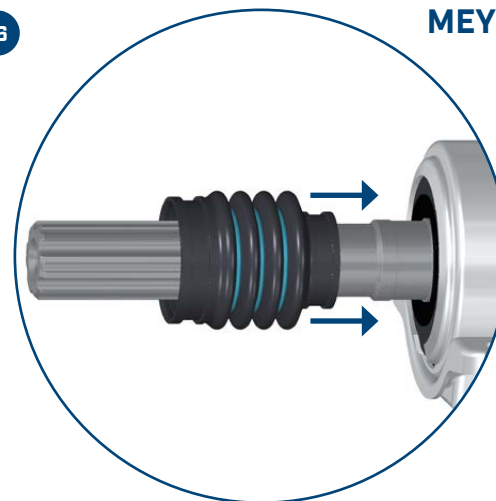


17

MEYLE

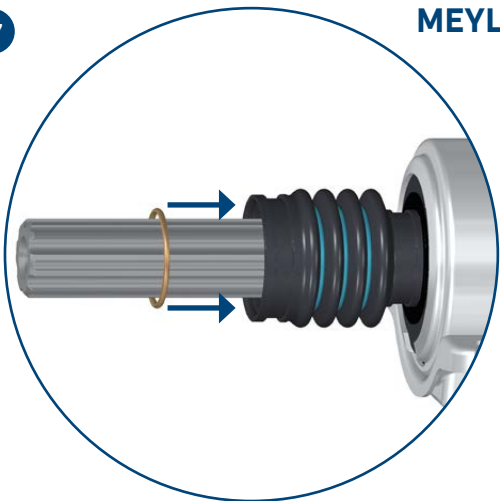


18

MEYLE

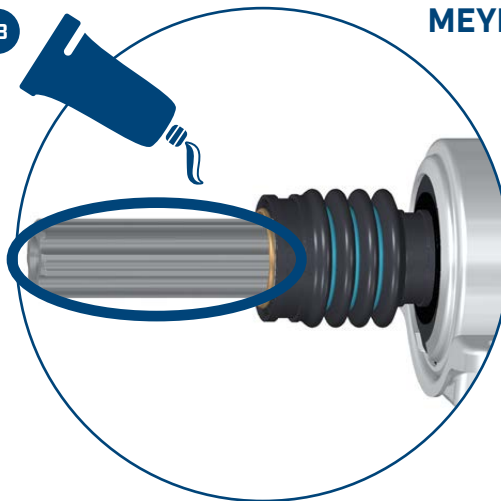


19

MEYLE

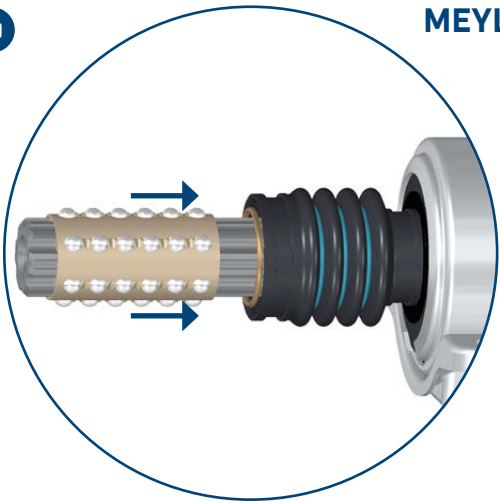


20

MEYLE

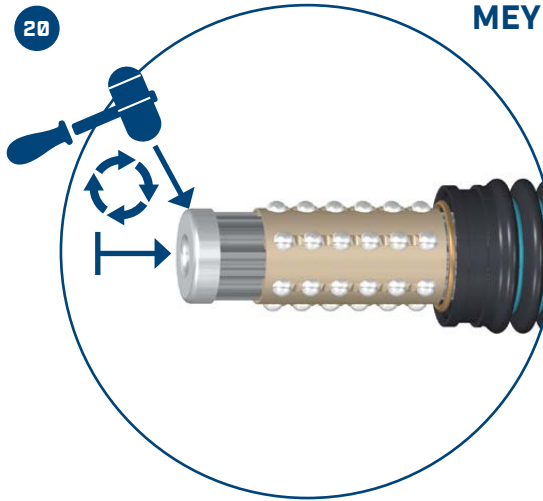


21

MEYLE

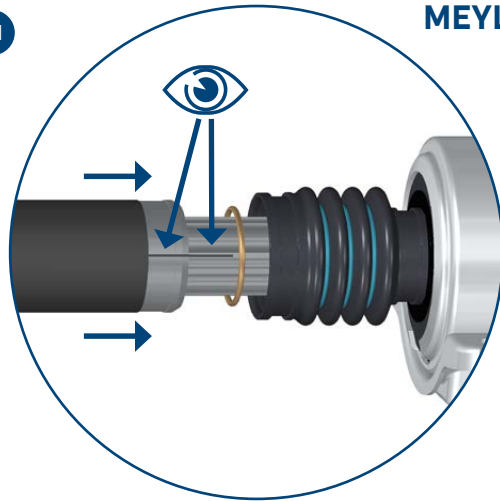


22

MEYLE

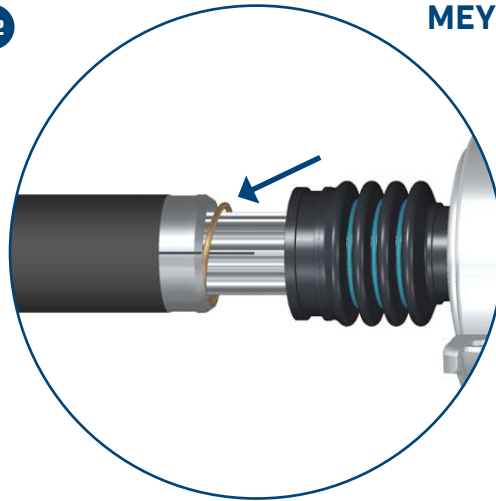


23

MEYLE

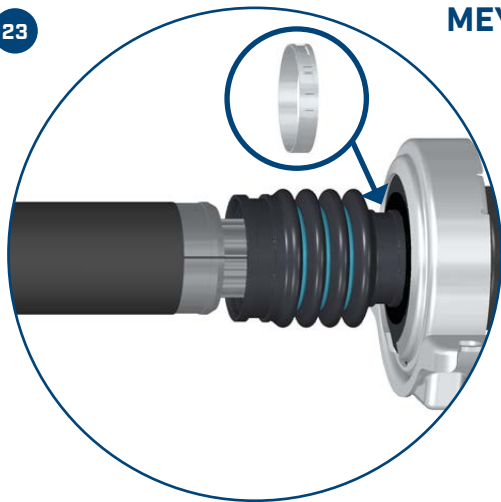


24

MEYLE

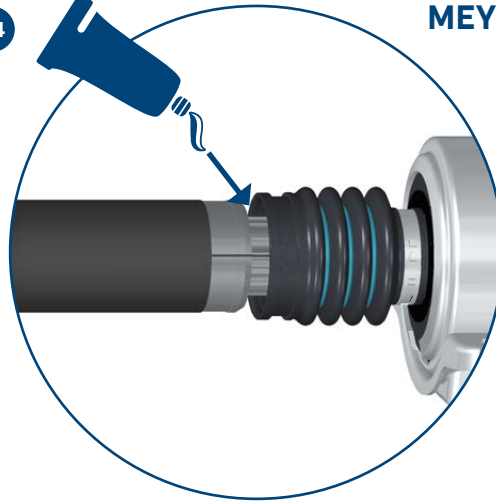


25

MEYLE

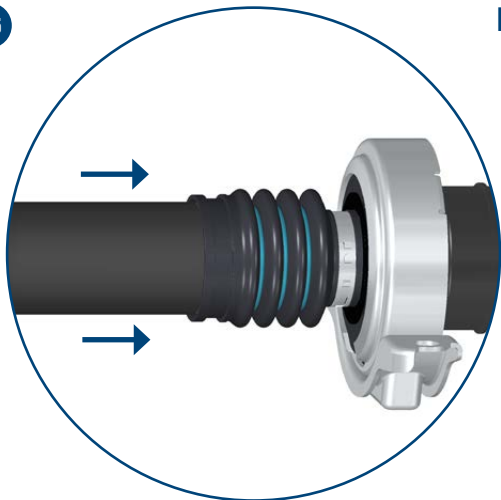


26

MEYLE

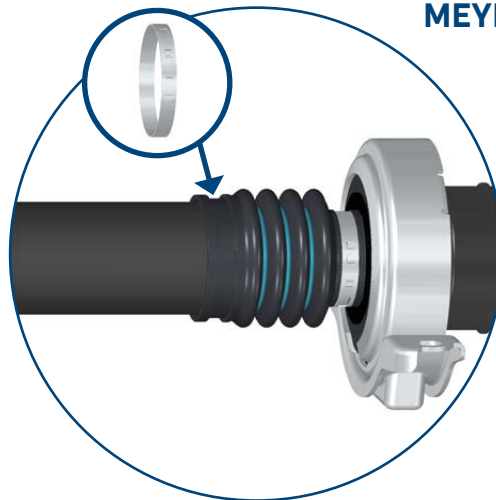

27

MEYLE

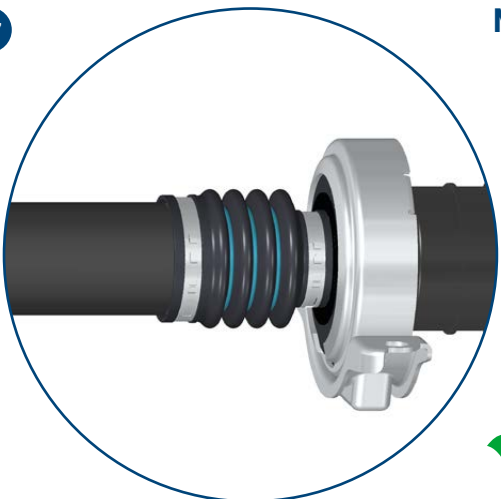

28

MEYLE

