

DONNEES TECHNIQUES


Fonctionnement

pneumatique

Commande

Valve à Membrane

PHOTOS

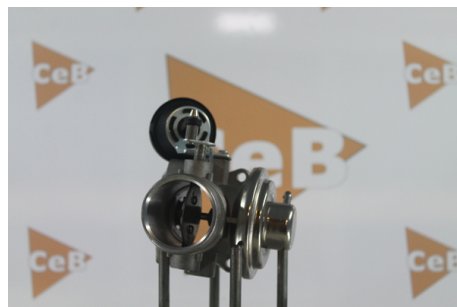

DOCUMENTS


CEB-03 Instructions de montage vannes EGR

APPLICATIONS

AUDI		
A2 (99-05) (8Z0) - 1.2 TDI	61 ch	03.2001 > 08.2005
A3 (96-03) (8L1) - 1.9 TDI	90 ch	09.1996 > 07.2001
	90 ch	09.1996 > 07.2001
	100 ch	10.2000 >
	110 ch	08.1997 > 07.2001

SEAT		
AROSA (6H) - 1.4 TDI	75 ch	01.2000 > 06.2004
CORDOBA (96-02) 3/5 portes (6K2) - 1.9 TDI	90 ch	06.1999 > 10.2002
	90 ch	06.1999 > 10.2002
	90 ch	06.1999 > 10.2002
	90 ch	06.1999 > 10.2002
	110 ch	06.1999 > 10.2002
	110 ch	06.1999 > 10.2002
CORDOBA (96-02) Vario (6K5) - 1.9 TDI	90 ch	06.1999 >
	90 ch	06.1999 >
	90 ch	06.1999 >
	90 ch	06.1999 >
	110 ch	06.1999 >
	110 ch	06.1999 >
CORDOBA (02-09)(6L2) - 1.4 TDI	75 ch	10.2002 >
IBIZA (99-02) (6K2, 6K/GP01) - 1.9 TDI	90 ch	08.1999 > 02.2002
	90 ch	08.1999 > 02.2002
	90 ch	08.1999 > 02.2002
	90 ch	08.1999 > 02.2002
	110 ch	08.1999 > 02.2002
	110 ch	08.1999 > 02.2002
IBIZA (02-08) (6L1) - 1.4 TDI	75 ch	05.2002 > 12.2005
LEON (98-06) (1M1) - 1.9 TDI	90 ch	11.1999 >
	110 ch	11.1999 >
TOLEDO (99-06) (1M2) - 1.9 TDI	90 ch	04.1999 > 05.2006
	110 ch	04.1999 > 05.2006
SKODA		
FABIA (99-07) (6Y2) - 1.4 TDI	75 ch	04.2003 >
FABIA (99-07) 3 volumes (6Y3) - 1.4 TDI	75 ch	04.2003 >
FABIA (99-07) Combi (6Y5) - 1.4 TDI	75 ch	04.2003 >
OCTAVIA (96-10) (1U2) - 1.9 TDI	90 ch	09.1996 > 03.2003
	90 ch	09.1996 > 03.2003
	110 ch	08.1997 > 03.2003
	110 ch	08.1997 > 03.2003
OCTAVIA (96-10) Combi (1U5) - 1.9 TDI	90 ch	07.1998 > 03.2003
	90 ch	07.1998 > 03.2003
	110 ch	07.1998 > 03.2003
	110 ch	07.1998 > 03.2003
OCTAVIA (96-10) Combi (1U5) - 1.9 TDI 4x4	90 ch	11.1999 > 03.2003
	100 ch	09.2000 > 03.2003

VOLKSWAGEN		
BORA (1J2) - 1.9 TDI	90 ch	10.1998 > 06.2001
	101 ch	09.2000 > 05.2005
	110 ch	10.1998 > 06.2001
	115 ch	12.1998 > 06.2001
BORA (1J2) - 1.9 TDI 4motion	90 ch	02.1999 > 06.2001
	101 ch	09.2000 > 05.2005
	115 ch	02.1999 > 06.2001
BORA Break (1J6) - 1.9 TDI	90 ch	05.1999 > 06.2001
	101 ch	09.2000 > 05.2005
	110 ch	05.1999 > 06.2001
	115 ch	05.1999 > 06.2001
BORA Break (1J6) - 1.9 TDI 4motion	101 ch	09.2000 > 05.2005
	115 ch	05.1999 > 06.2001
CADDY (96-04) Break (9K9B) - 1.9 TDI	90 ch	10.1996 > 01.2004
CADDY (96-04) Camionnette (9K9A) - 1.9 TDI	90 ch	09.1996 > 01.2004
FLIGHT 3 volumes (6KV2) - 90 1.9 TDI	90 ch	09.1996 > 09.2001
GOLF (97-05) (1J1) - 1.9 TDI	90 ch	10.1997 > 05.2004
	101 ch	09.2000 > 06.2005
	110 ch	08.1997 > 05.2004
	115 ch	12.1998 > 06.2001
GOLF (97-05) (1J1) - 1.9 TDI 4motion	90 ch	07.1998 > 04.2002
	101 ch	09.2000 > 06.2005
	115 ch	09.1999 > 06.2001
GOLF (99-05) Break (1J5) - 1.9 TDI	90 ch	05.1999 > 05.2006
	101 ch	09.2000 >
	110 ch	05.1999 > 06.2001
	115 ch	08.1999 > 06.2001
GOLF (99-05) Break (1J5) - 1.9 TDI 4motion	90 ch	05.1999 > 04.2002
	101 ch	09.2000 >
	115 ch	05.1999 > 06.2001
LUPO - 1.2 TDI 3L	61 ch	07.1999 > 07.2005
LUPO - 1.4 TDI	75 ch	01.1999 > 07.2005
NEW BEETLE (97-11) (9C1, 1C1) - 1.9 TDI	90 ch	01.1998 > 06.2004
POLO (99-02) (6N2) - 1.4 TDI	75 ch	10.1999 > 09.2001
POLO (97-02) Variant (6KV5) - 1.9 TDI	90 ch	05.1997 > 09.2001
	110 ch	06.1998 > 09.2001
POLO (02-09) (9N_) - 1.4 TDI	75 ch	10.2001 > 06.2005

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.