

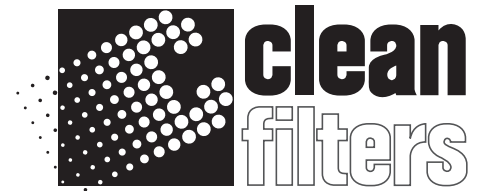


filters NC2012 NC2074CA

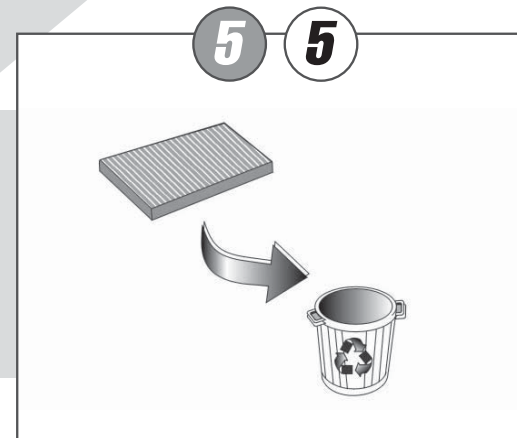

- Skoda Octavia
VW Polo - Golf 3
- Audi A3 - Seat Cordoba
Ibiza - Inca

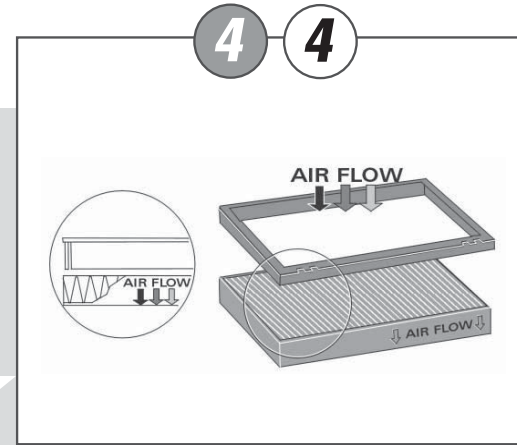

Per il montaggio procedere eseguendo le operazioni in senso inverso.
 Continue mounting in reverse order of operations.
 Le remontage s'effectue dans l'ordre inverse.
 Der weitere Einbau erfolgt in umgekehrter Reihenfolge.
 Para concluir la instalaci3n, seguir el orden inverso.

