




20'

1

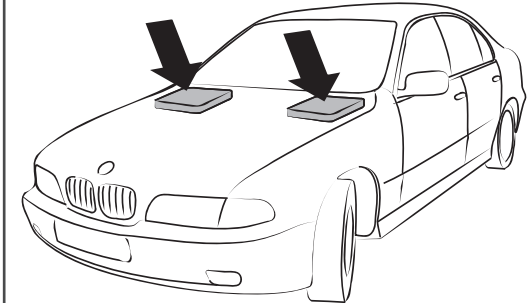


1>2>3>4



2

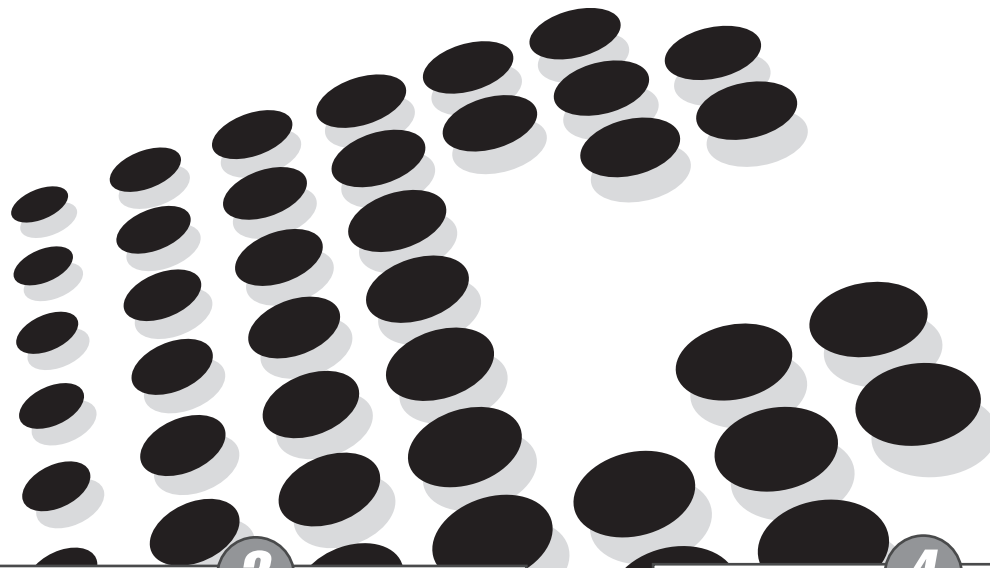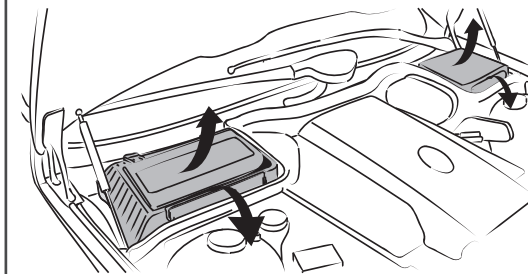

3

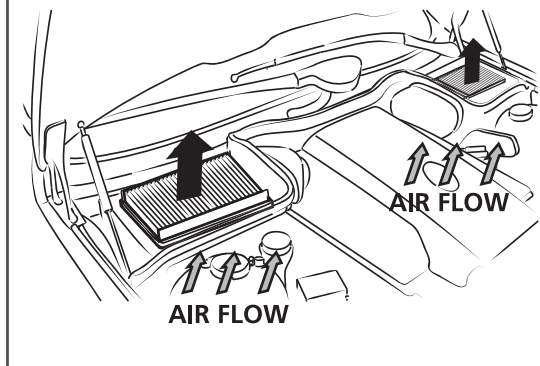

4

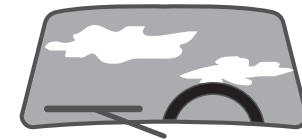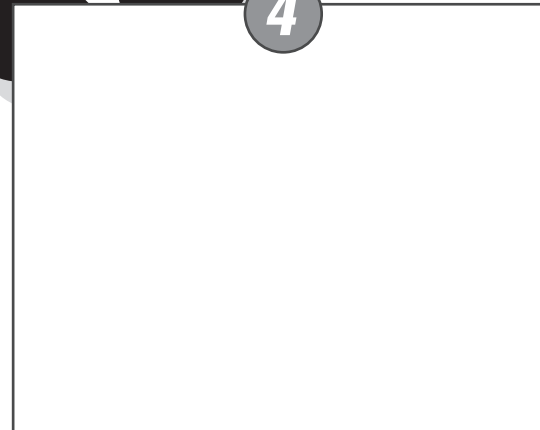

# filters NC 2069CA NC 2070 BMW Series 5 (E39) 11/95 -> 07/04

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalaciòn, seguir el orden inverso.

4>3>2>1