

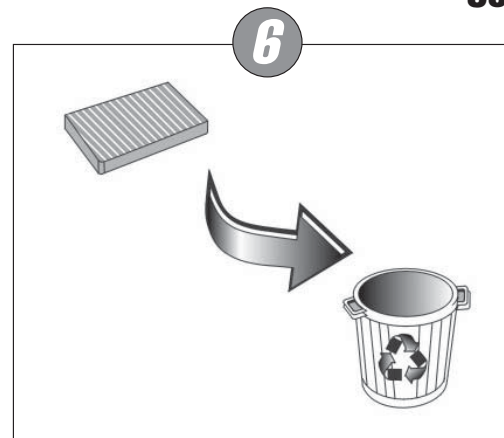
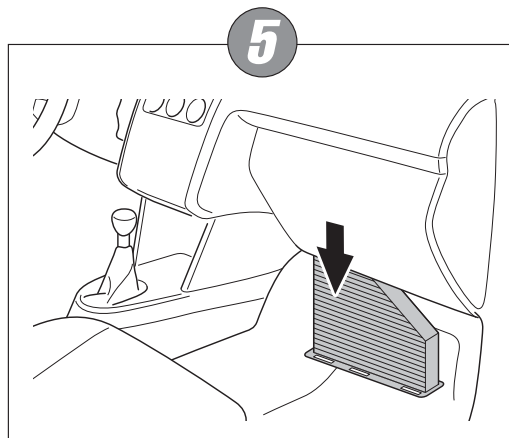
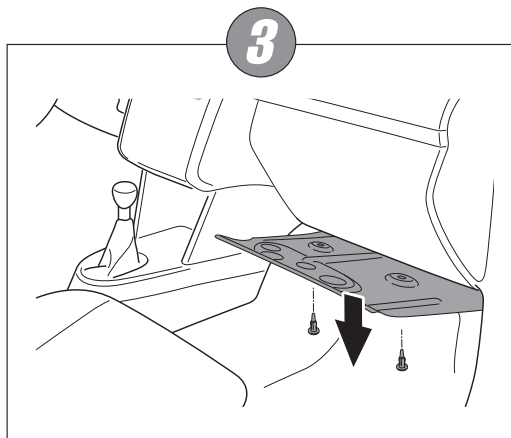
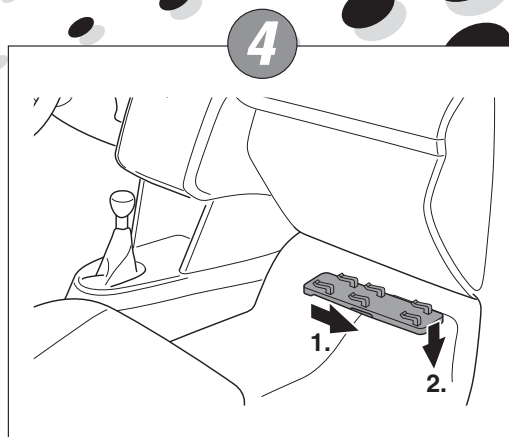


15'

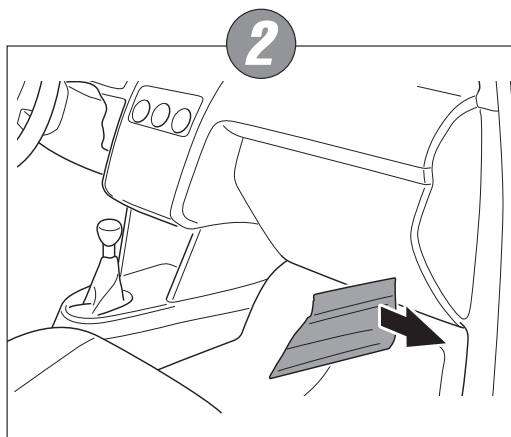

clean
filters

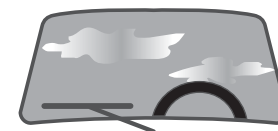

filters **NC2132**
NC2129 CA
VW Golf V - Golf VI
VW Scirocco
VW Caddy III - Touran
Audi A3
Skoda Octavia II
Seat Altea

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continuarmounting in reverse order of operations

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge

Para concluir la instalación, seguir el orden inverso.

