



10'


1

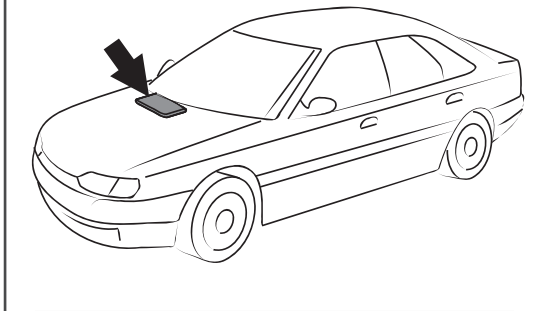


2

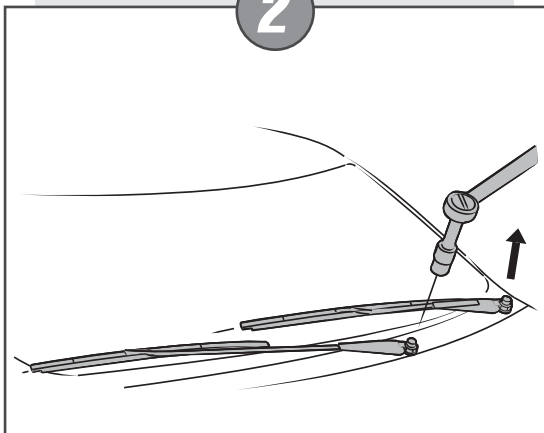


3

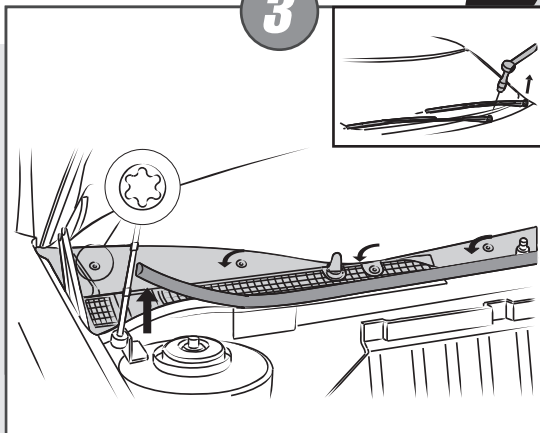



4

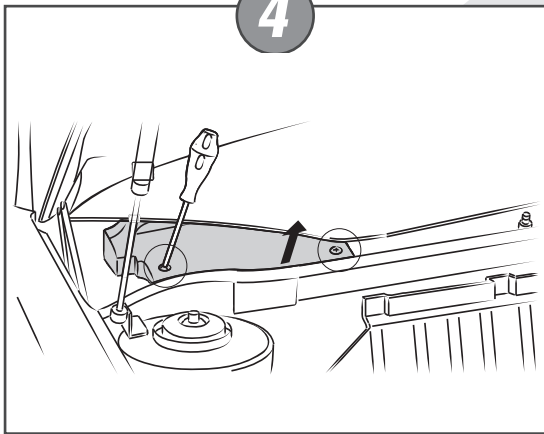

5

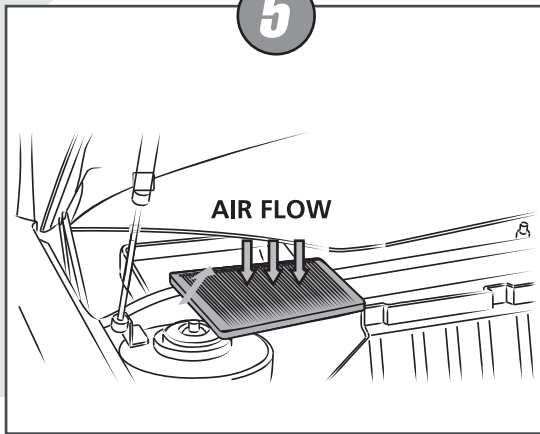

6

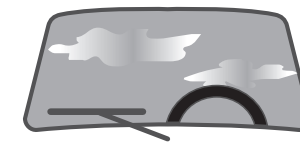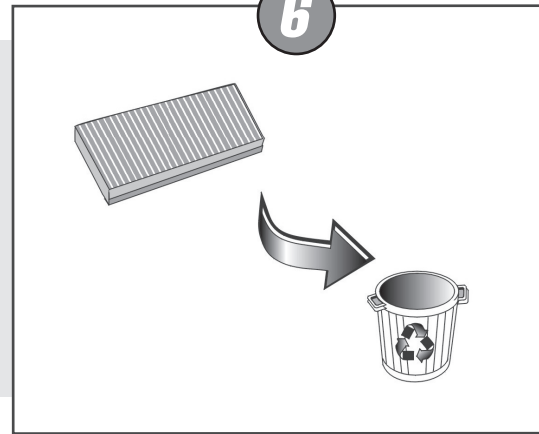

# filters NC 2149 RENAULT Safrane I-II

Per il montaggio procedere eseguendo le operazioni in senso inverso.

*Continue mounting in reverse order of operations.*

Le remontage s'effectue dans l'ordre inverse.

*Der weitere Einbau erfolgt in umgekehrter Reihenfolge.*

Para concluir la instalaci3n, seguir el orden inverso.

