



Murano (Z750)

1


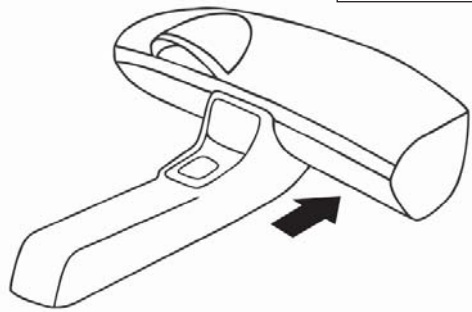


Murano (Z751)


1

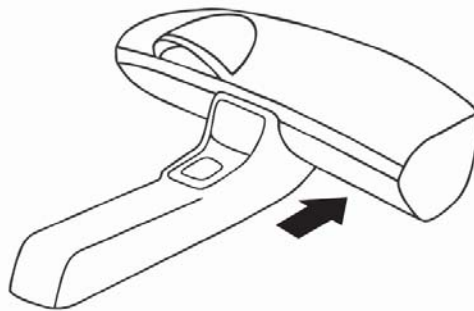


25'

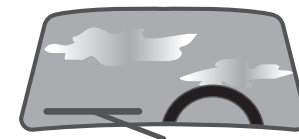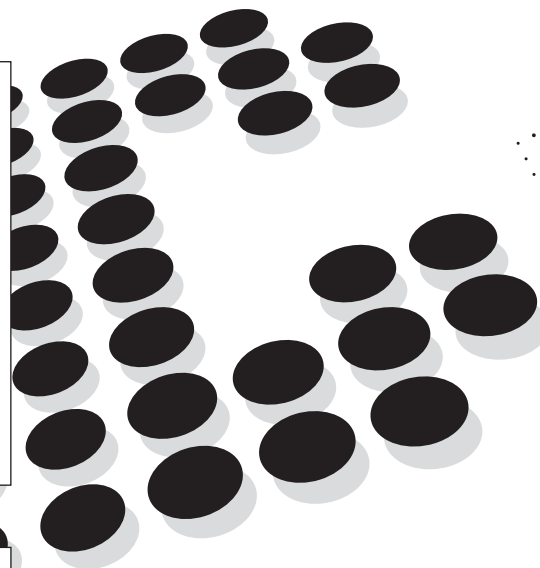

2

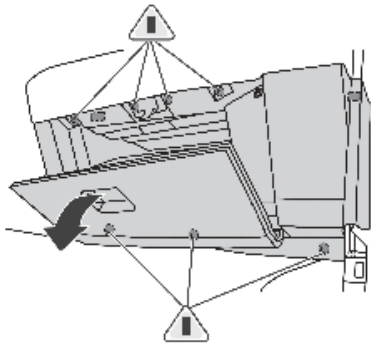

2

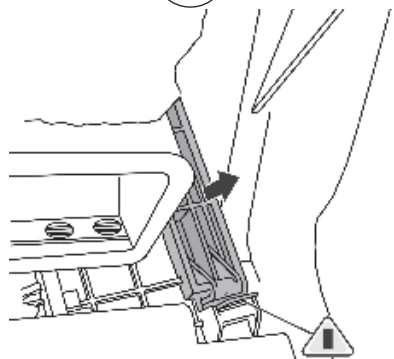


filter **NC2331**


**Nissan  
Murano (Z50) (03/05→)**

**Murano (Z51) (10/08→)**

3

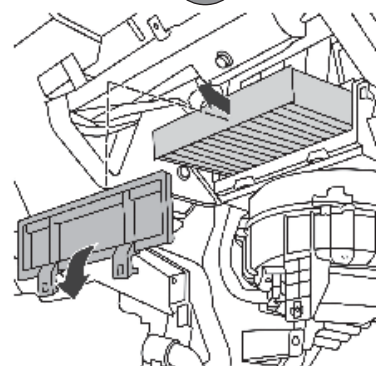


3

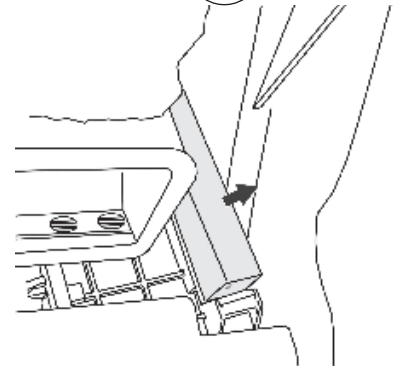

4

4

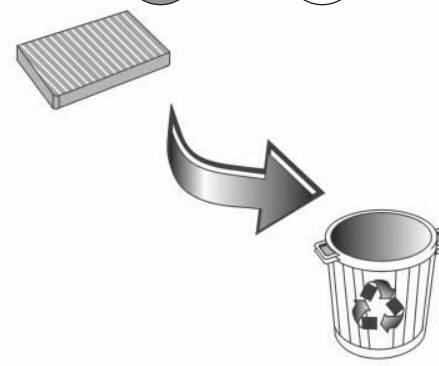

Per il montaggio procedere eseguendo le operazioni in senso inverso.

*Continuomounting in reverse order of operations*

Le remontage s'effectue dans l'ordre inverse.

*Der weitere Einbau erfolgt in umgekehrter Reihenfolge*

Para concluir la instalación, seguir el orden inverso.

