


## IDENTIFICATION REAR SHOCK ABSORBER

Opel Corsa C



FI093EU

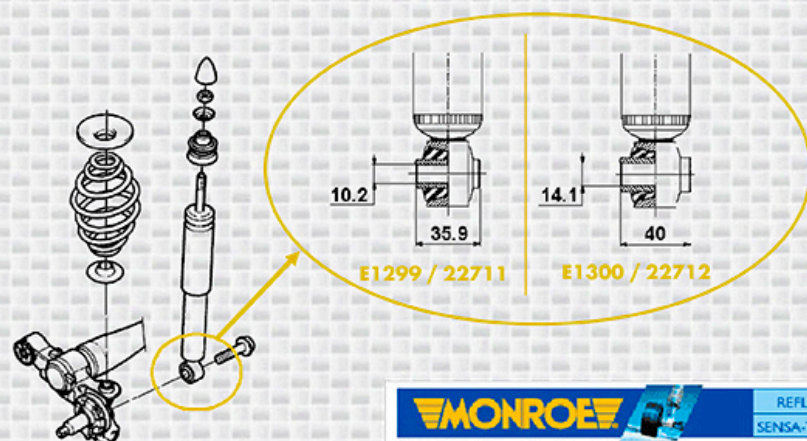

**Note:** To ensure the correct Monroe® part is selected, measure the bottom fixing hole diameter of the old shock absorber. (see diagram).



		REFLEX SENSA-TRAC	ORIGINAL ADVENTURE	i	i	←	REFLEX SENSA-TRAC	ORIGINAL ADVENTURE	←
<b>CORSA C</b>									
1.0, 1.2, 1.3 CDTi, 1.7 Di	9.00→06	E4723 (E4724L E4723R)	16327		PK173 <sup>o</sup> MK149		E1299	22711	
(-) HD, (-) SP	16328								
1.4, 1.8, 1.7 DTi, 1.7 CDTi	9.00→06	E4723 (E4724L E4723R)	16327		PK173 <sup>o</sup> MK149		E1300	22712	
(-) HD, (-) SP	16328								
1.0, 1.2, 1.4, 1.8, 1.3 CDTi, 1.7 Di, 1.7 DTi, 1.7 CTi	9.00→06		16320		PK173 <sup>o</sup> MK149		E1300	22712	
(+) SP	16330								
1.0, 1.2, 1.4, 1.8, 1.3 CDTi, 1.7 Di, 1.7 DTi, 1.7 CTi	9.00→06	E4723 (E4724L E4723R)	16327		PK173 <sup>o</sup> MK149		E1300	22712	
(-) HD	16328								