





Compress the suspension when tightening

- Mounting bolts should be tightened to the correct torque, as shown in the diagram below, only when the correct wheel height / 260mm. length is achieved.

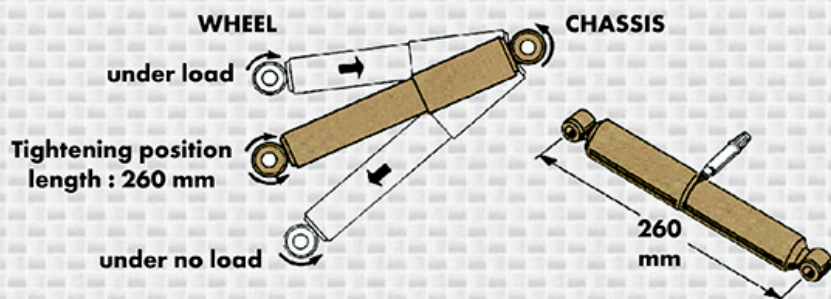

To facilitate installation, mark a reference guide on the new shock absorber, when the correct length of 260mm is achieved, the reference line should be used as a guide during the installation process. Ensure the reference line, lines up with the dust shield before tightening the mounting bolts

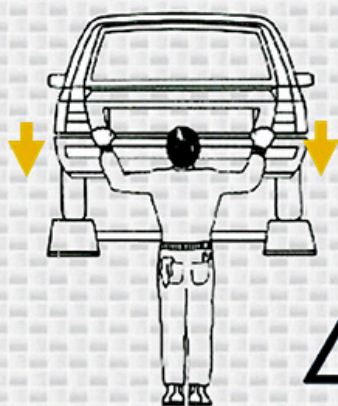

Spacer A is glued to the bottom of the shock absorber housing. It facilitates the unlocking of the lower mounting. The spacer is obligatory.



Compress the suspension when tightening.

