
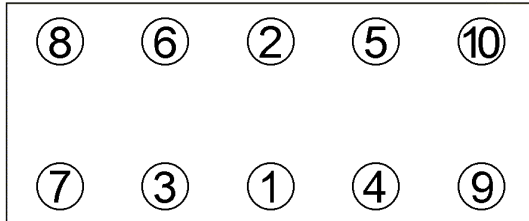


Anziehvorschrift für Zylinderkopf	144.170	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Fiat

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



760.720
M 9x1,25x96



Anziehen/ Tightening/ Serrage/ Apriete	128.A.000 128.AC.5000	138.A.000
	* 95 Nm	M 10 * 40 Nm ➤ 90° ➤ 90° 1.000 km ➤ 60° - 90°
		M 12 * 35 Nm 70 Nm 93 Nm 1.000 km ☐ 93 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

81 mm Ø, 1,59/1,50 mm ÷

128	Mot128.A.000	1969>1976
128 Sport Coupé	Mot.128.AC.5000	ab 1971>
128 Spezial		ab 1974>
128 3p		ab 1975>
Ritmo 60	Mot.138A.000	1978>07/1982

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

144.170