


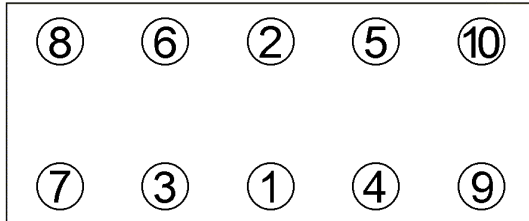
Anziehvorschrift für Zylinderkopf	180.180	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



760.720
M 9 x 96



Anziehen/ Tightening/ Serrage/ Apriete	156C.046 176A6.000 176B2.000 (Punto)	160A3.000 176B2.000 156C.046(Y10 89-95)
* 20 Nm 30 Nm ➤ 90° ➤ 90°	* 30 Nm ➤ 90° ➤ 90°	

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,95 mm, Ø 71 mm

Tipo, Uno, Y10 1,1 Ltr. ab 1988>
Panda, Punto 1,1 Ltr. ab 1991>
Cinquecento 1,1 Ltr. ab 1994>1998
Seicento 1,1 Ltr. ab 1998>2000

Mot. 176B2.000, 156C.046, 176A6.000,

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

180.180