
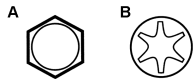


<b>Anziehvorschrift für Zylinderkopf</b>	<b>436.651</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



758.280  
M 11x1,5x175

Anziehen/ Tightening/ Serrage/ Apriete	A:	B:
* <input type="checkbox"/>	60 Nm	* 60 Nm
<input type="checkbox"/>	20 Nm + 120°	<input type="checkbox"/> 20 Nm + 300°
* <input type="checkbox"/>	15 min	
● <input type="checkbox"/>	120 min	
<input type="checkbox"/>	20 Nm + 120°	

Zeichenerklärung / Explanations / Explication / Explicacion

* <input type="checkbox"/>	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
* <input type="checkbox"/>	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
<input type="checkbox"/>	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
● <input type="checkbox"/>	Setzzeit	relaxation time	durée de tassement	tiempo de espera
▶ <input type="checkbox"/>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 84,5 mm;      ⌀: 1,48 mm

Mot: XU5M/J/JA/S/CP/JP, XU5 1C/2C  
XU7JB/JP, XU9S/J/JA/J4, XU9 2C  
1,6-1,9 ltr.  
53-116 kW (72-157 PS)

BX, ZX, Xantia, Xsara, ab 07/1987→

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*436.651\***