
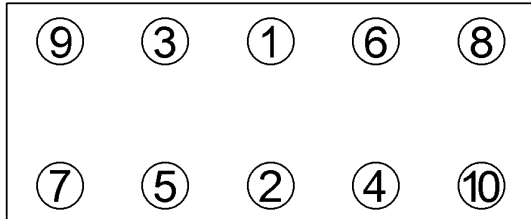


Anziehvorschrift für Zylinderkopf	540.480	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Nissan
		Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ * 29 Nm
Tightening/ 78 Nm
Serrage/ □ -360°
Apriete ▶ 29 Nm
80°-85°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
▶	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

MC KA24E

Nissan Pick up 2,4i 12V 04.92-02.98 91KW

Nissan Pick up 2,4i 02.98- 88KW

Nissan Prairie 2,4i 04.92-07.94 98KW

Nissan Terrano II 2,4 ltr. 05.96-01.02 85KW

Nissan Terrano II 2,4i 12V 02.93-06.96 91KW

Ford Maverick 2,4i 02.93-08.96 91KW

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

540.480