
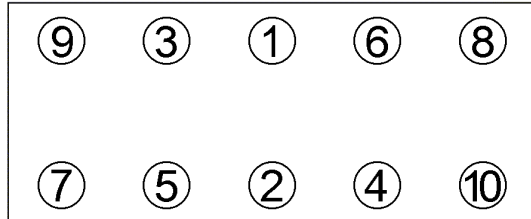


<b>Anziehvorschrift für Zylinderkopf</b>	<b>540.530</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Toyota</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ \* 25 Nm  
Tightening/ 49 Nm  
Serrage/ ► 90°  
Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

MC: 3S-GE 2,0GTI 16V + 2,0i 16V + 2,0 16V  
 Celica Coupe 10.89-11.99 125-129 KW  
 Celica Cabriolet 05.91-11.99 115-125 KW  
 MR2 12.89-05.00  
 Carina E + Station Wagon 04.92-09.97 116-129 KW

MC: 3S-GTE 2,0 turbo, 2,0i turbo  
 Celica 03.88-11.99 136-178 KW

ElringKlinger AG, Max-Eyth-Str.2  
 72581 Dettingen / Erms. Tel. 07123/724 601

**\*540.530\***