
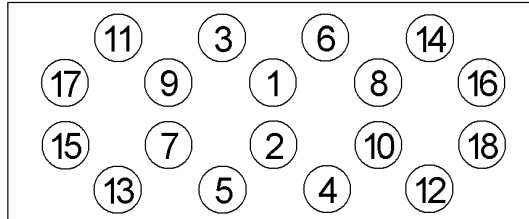


Anziehvorschrift für Zylinderkopf	715.210	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Nissan

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



- | | | |
|-------------|---|---------------|
| Anziehen/ | * | 39 Nm tighten |
| Tightening/ | ➤ | 180° tighten |
| Serrage/ | ➤ | -360° loosen |
| Apriete | | 39 Nm tighten |
| | ➤ | 90° tighten |
| | ➤ | 90° tighten |

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 89 mm; ɸ: 0,95 mm

Mot: YD25DDTi
2,5 ltr.
98-106 kW (133-144 PS)

Navara (D40) 2,5 dCi
Pick up (D22) 2,5 Di

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

715.210