



Congratulations on your purchase of an Arnott[®] air suspension product. We at Arnott Incorporated are proud to offer a high quality product at the industry's most competitive pricing. Thank you for your confidence in us and our product.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified, ASE Certified, professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

"Engineered to Ride, Built to Last®"





1

WARNING: The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.

Arnott[®] is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling <u>800-251-8993</u> during normal business hours or email <u>techassistance@arnottinc.com</u>. (In the EU please call +31 (0)73 7850 580 or email <u>info@arnotteurope.com</u>)





GENERAL INFORMATION:

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at <u>www.arnottinc.com.</u>

- Not to be stored below 5°F (-15°C) and above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

NOTE: THIS VEHICLE CONTAINS A "CLOSED AIR SUPPLY SYSTEM". REPLACEMENT OF COMPONENTS REQUIRES PROPER ADHERENCE TO PROCEDURES SET FORTH WITHIN OE SERVICING LITERATURE. FAILURE TO COMPLY WITH THE OE PRESCRIBED PROCEDURES CAN RESULT IN COMPONENT DAMAGE AND/OR FAILURE.

AIR STRUT REMOVAL

- 1. SET STEERING TO STRAIGHT AHEAD.
- 2. RAISE VEHICLE.
- 3. REMOVE APPLICABLE FRONT WHEEL. (FIGURE 1)

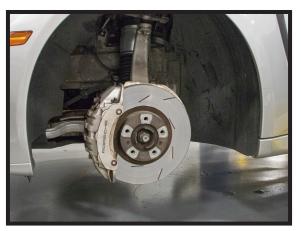


FIGURE 1

2





4. REMOVE THE UPPER PLASTIC COVER THAT SITS ABOVE THE AIR STRUT. (FIGURE 2)



FIGURE 2

5. DISCONNECT THE STRUT CONNECTOR RETAINING CLIP. (FIGURE 3)





6. DISCONNECT THE TOP ELECTRICAL PLUG. (FIGURE 4)



FIGURE 4

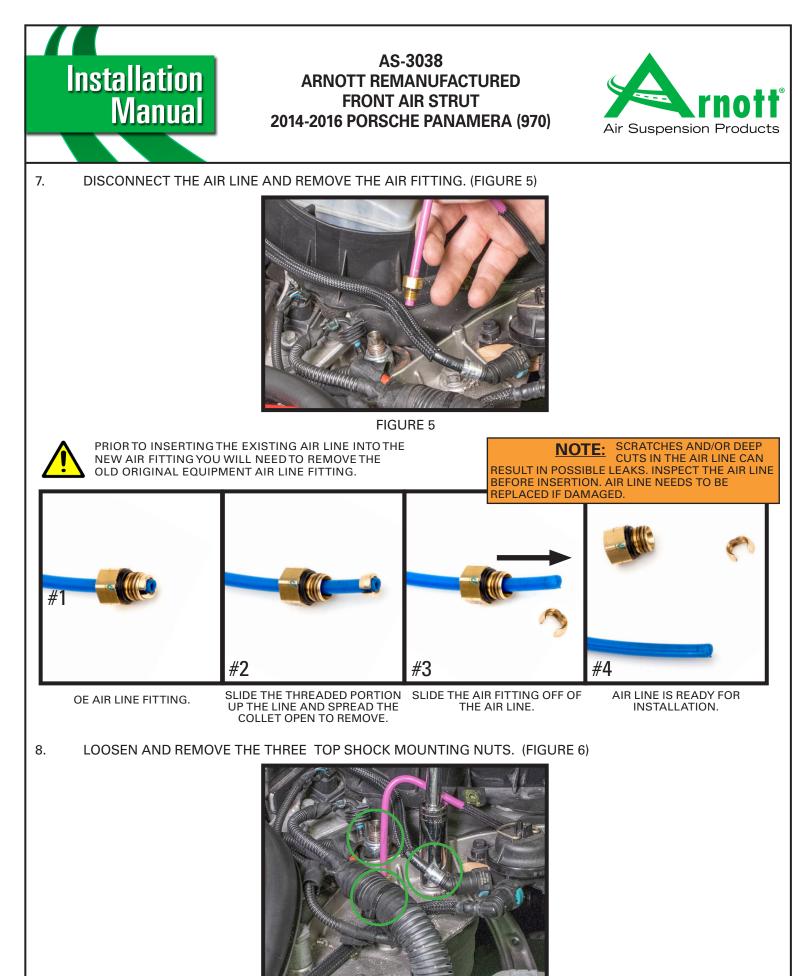


FIGURE 6





9. DISCONNECT THE WHEEL SPEED SENSOR. (FIGURE 7)



FIGURE 7

10. DETACH THE WHEEL SPEED SENSOR WIRES FROM THEIR RETENTION BRACKETS. (FIGURES 8, 9, 10)

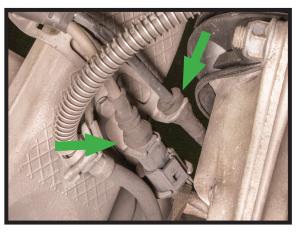


FIGURE 8







FIGURE 10





11. LOOSEN AND REMOVE THE SWAY BAR END LINK NUT AND SEPERATE FROM THE STRUT. (FIGURE 11)



FIGURE 11

12. LOOSEN AND REMOVE THE BOTTOM MOUNT NUT AND BOLT. (FIGURE 12)



FIGURE 12

13. LOOSEN AND REMOVE THE UPPER BALL JOINT NUT AND SEPERATE THE BALL JOINT FROM THE SPINDLE ASSEMBLY. (FIGURE 13)



FIGURE 13





14. REMOVE THE AIR STRUT FROM THE VEHICLE. (FIGURE 14)



FIGURE 14

15. REMOVAL COMPLETE.

AIR STRUT INSTALLATION



Tighten all nuts and bolts to manufacturer's specifications during the installation process.



Do not remove the air fitting from the air strut. Doing so may cause damage and/or void warranty. Remove the white shipping pin from the new air fitting and insert the air line until fully seated.



INSTALL THE ARNOTT TOP PLATE ONTO THE AIR SHOCK. (FIGURES 15, 16)



FIGURE 15



FIGURE 16

7 AS-3038





2. INSTALL THE AIR SHOCK INTO THE VEHICLE. (FIGURE 17)



FIGURE 17

3. INSTALL THE BOTTOM MOUNTING BOLT AND NUT AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURES 18, 19)



FIGURE 18



FIGURE 19





4. REATTACH THE SWAY BAR END LINK. REINSTALL THE SWAY BAR END LINK NUT AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURE 20)



FIGURE 20

5. REATTACH THE UPPER BALL JOINT TO THE SPINDLE ASSEMBLY. INSTALL THE NUT AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURE 21)



FIGURE 21





6. REINSTALL THE TOP SHOCK MOUNTING NUTS AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURE 22)



FIGURE 22

7. REINSTALL THE AIR LINE. (FIGURE 23)



FIGURE 23



REV 1

09/04/2018





8. REINSTALL TOP ELECTRICAL PLUG, BEING CAREFUL TO APPROPRIATELY ORIENT THE ELECTRICAL CONNECTION TO ALIGN THE PINS. (FIGURE 24)



FIGURE 24

9. REINSTALL THE STRUT CONNECTOR RETAINING CLIP. (FIGURE 24)



FIGURE 25





10. REATTACH THE WHEEL SPEED SENSOR WIRES TO THE MOUNTING BRACKETS. (FIGURES 26, 27, 28)



FIGURE 26



FIGURE 27



FIGURE 28

11. RECONNECT THE WHEEL SPEED SENSOR. (FIGURE 29)



FIGURE 29

12 AS-3038





12. REINSTALL THE UPPER PLASTIC COVER. (FIGURE 30)



FIGURE 30

- 13. REINSTALL THE WHEEL.
- 14. LOWER THE VEHICLE.
- 15. INSTALLATION COMPLETE.

NOTE: THIS VEHICLE CONTAINS A "CLOSED AIR SUPPLY SYSTEM". REPLACEMENT OF COMPONENTS REQUIRES PROPER ADHERENCE TO PROCEDURES SET FORTH WITHIN OE SERVICING LITERATURE. FAILURE TO COMPLY WITH THE OE PRESCRIBED PROCEDURES CAN RESULT IN COMPONENT DAMAGE AND/OR FAILURE.